

# USER'S MANUAL

GOOSENECK AND BUMPER PULL TRAILERS



**ELITE TRAILERS**



# **ELITE TRAILERS**

## **GOOSENECK AND BUMPER PULL TRAILERS**

### **! WARNING**

This User's Manual contains safety information and instructions for your trailer.

You must read this manual, in its entirety, before loading or towing your trailer.

You must follow all safety precautions and instructions before operation.



SCAN TO DOWNLOAD A PDF VERSION

**ELITE TRAILER MANUFACTURING, LLC.**  
7700 SW 29<sup>TH</sup> Street • Oklahoma City, OK 73179  
Phone: (405) 745-5757 • Fax: (405) 745-4527  
[www.elitetrailers.com](http://www.elitetrailers.com)

ETM3001  
Rev. 06/2018

THIS PAGE INTENTIONALLY LEFT BLANK

# TABLE OF CONTENTS

## Gooseneck and Bumper Pull Trailers

<b>1. INTRODUCTION AND WARRANTY INFORMATION</b> .....	<b>1</b>
1.1 INTRODUCTION .....	1
1.2 WARRANTY .....	1
1.2.1 Warranty Procedure Guide .....	1
1.2.2 Manufacturers Warranty .....	2
<b>2. GENERAL SAFETY INFORMATION</b> .....	<b>3</b>
2.1 SAFETY ALERT SYMBOLS AND SIGNAL WORDS .....	3
2.2 MAJOR HAZARDS .....	3
2.2.1 Improper Sizing of the Trailer to the Tow Vehicle .....	3
2.2.2 Driving Too Fast .....	3
2.2.3 Failure to Adjust Driving Behavior when Towing a Trailer .....	4
2.2.4 Trailer not Properly Coupled to the Hitch .....	4
2.2.5 Proper Use of Safety Chains .....	4
2.2.6 Proper Connection of Breakaway Brake .....	5
2.2.7 Matching Trailer and Hitch .....	5
2.2.8 Worn Tires, Loose Wheels and Lug Nuts .....	5
2.2.9 The Proper Tightness (Torque) for Lug Nuts .....	5
2.2.10 Improper Loading .....	6
2.2.11 Unsafe Load Distribution .....	6
2.2.12 Shifting Cargo .....	7
2.2.13 Inappropriate Cargo .....	7
2.2.14 Inoperable Brakes, Lights and Mirrors .....	7
2.2.15 Hazards from Modifying your Trailer .....	7
2.2.16 Hazards to Horses (Horse Trailers) .....	7
2.2.17 Hazards to Livestock (Livestock Trailers) .....	8
2.2.18 Hazards from Accessories .....	8
2.2.18.1 Generator .....	8
2.2.18.2 Shore Power .....	8
2.2.18.3 LP Gas Fuel System .....	9
2.2.19 Safety Warning Labels on your Trailer .....	9
2.2.19.1 Gooseneck Trailer Warning Label Locations .....	9
2.2.19.2 Bumper Pull Trailer Warning Label Locations .....	10
2.2.20 Trailer Towing Guide .....	10
2.2.21 Reporting Safety Defects .....	10
2.3 SAFE TRAILER TOWING GUIDELINES .....	11
<b>3. TIRE SAFETY INFORMATION</b> .....	<b>12</b>
3.1 STEPS FOR DETERMINING CORRECT LOAD LIMIT - TRAILER .....	12
3.1.1 Trailers 10,000 Pounds (4,536 Kilograms) GVWR or Less .....	12
3.1.2 Trailers over 10,000 Pounds (4,536 Kilograms) GVWR .....	12
3.2 STEPS FOR DETERMINING CORRECT LOAD LIMIT - TOW VEHICLE .....	12
3.3 GLOSSARY OF TIRE TERMINOLOGY .....	12
3.4 TIRE SAFETY - EVERYTHING RIDES ON IT .....	15
3.4.1 Safety First - Basic Tire Maintenance .....	15
3.4.2 Finding your Vehicle's Recommended Tire Pressure and Load Limits .....	15
3.4.3 Understanding Tire Pressure and Load Limits .....	15
3.4.4 Checking Tire Pressure .....	15
3.4.5 Steps for Maintaining Proper Tire Pressure .....	16
3.4.6 Tire Size .....	16
3.4.7 Tire Tread .....	16
3.4.8 Tire Balance and Wheel Alignment .....	16
3.4.9 Tire Repair .....	16

# TABLE OF CONTENTS

## Gooseneck and Bumper Pull Trailers

---

3.4.10	Tire Fundamentals .....	16
3.4.10.1	UTQGS Information .....	16
3.4.10.2	Information on Passenger Vehicle Tires .....	17
3.4.10.3	Information on Light Truck Tires .....	17
3.4.10.4	Information on Special Trailer Tires .....	18
3.4.11	Tire Safety Tips .....	18
<b>4.</b>	<b>COUPLING TO THE TOW VEHICLE .....</b>	<b>19</b>
4.1	USE AN ADEQUATE TOW VEHICLE .....	19
4.1.1	Trailer Information .....	19
4.1.1.1	Definitions .....	20
4.2	COUPLING AND UNCOUPLING THE TRAILER .....	20
4.2.1	Various Coupler Designs .....	21
4.2.2	Trailers with Ball-Hitch Coupler (Bumper Pull) .....	21
4.2.2.1	Before Coupling the Trailer to the Tow Vehicle .....	22
4.2.2.2	Prepare the Coupler and Hitch .....	22
4.2.2.3	Couple the Trailer to the Tow Vehicle .....	23
4.2.2.4	Rig the Safety Chains .....	23
4.2.2.5	Attach and Test Electric Breakaway Brake System .....	23
4.2.2.6	Connect the Electrical Cables .....	24
4.2.2.7	Uncoupling the Ball-Hitch (Bumper Pull) Trailer with Tongue Jack .....	24
4.2.3	Trailers with Gooseneck Coupler and Drop-leg Jack .....	25
4.2.3.1	Before Attempting to Tow the Trailer .....	26
4.2.3.2	Prepare the Ball Receiver and Gooseneck Ball .....	26
4.2.3.3	Couple the Trailer to the Tow Vehicle .....	26
4.2.3.4	Rig the Safety Chains .....	27
4.2.3.5	Attach and Test the Breakaway Brake System .....	27
4.2.3.6	Connect the Electrical Cables .....	28
4.2.3.7	Uncoupling the Gooseneck Trailer with Drop-leg Jack .....	29
4.2.4	Trailers with Kingpin and Drop-leg Jack(s) .....	29
4.2.4.1	Before Attempting to Tow the Trailer .....	30
4.2.4.2	Couple the Trailer to the Tow Vehicle .....	30
4.2.4.3	Attach and Test the Breakaway Brake System .....	31
4.2.4.4	Connect the Electrical Cables .....	31
4.2.4.5	Uncoupling the Kingpin Trailer with Drop-leg Jack(s) .....	32
<b>5.</b>	<b>LOADING THE TRAILER .....</b>	<b>33</b>
5.1	TONGUE WEIGHT .....	33
5.1.1	Checking Tongue Weight .....	34
5.2	SECURING THE CARGO .....	34
5.2.1	Loading Cargo (Enclosed Trailer) .....	34
5.2.1.1	Preparing the Trailer for Loading .....	34
5.2.1.2	Loading the Enclosed Trailer .....	34
5.2.2	Loading Horses (Horse Trailer) .....	35
5.2.2.1	Preparing the Horse Trailer for Loading .....	35
5.2.2.2	Loading the Horse Trailer .....	36
5.2.3	Loading Livestock (Livestock Trailer) .....	37
5.2.3.1	Preparing the Livestock Trailer for Loading .....	37
5.2.3.2	Loading the Livestock Trailer .....	37
<b>6.</b>	<b>CHECKING THE TRAILER BEFORE AND DURING EACH TOW .....</b>	<b>38</b>
6.1	PRE-TOW CHECKLIST .....	38
6.2	MAKE REGULAR STOPS .....	38

# TABLE OF CONTENTS

## Gooseneck and Bumper Pull Trailers

<b>7. BREAKING-IN A NEW TRAILER</b> .....	<b>39</b>
7.1 RETIGHTEN LUG NUTS AT FIRST 10, 25 AND 50 MILES (16, 40 AND 80 KILOMETERS) .....	39
7.2 ADJUST BRAKE SHOES AT FIRST 200 MILES (322 KILOMETERS) .....	39
7.3 SYNCHRONIZING THE BRAKE SYSTEM .....	39
7.4 TIRE PRESSURE .....	39
<b>8. ACCESSORIES</b> .....	<b>40</b>
8.1 GASOLINE-POWERED ELECTRIC GENERATORS .....	40
8.2 ACCESSORY BATTERY .....	40
8.3 SHORE POWER .....	41
8.4 LP GAS FUEL SYSTEM .....	41
8.4.1 LP Gas System Troubleshooting .....	42
8.5 VENDING AND ACCESSORY DOORS .....	42
8.6 ELECTRIC-POWERED LANDING GEAR .....	42
<b>9. INSPECTION, SERVICE AND MAINTENANCE</b> .....	<b>43</b>
9.1 INSPECTION, SERVICE AND MAINTENANCE SUMMARY CHARTS .....	43
9.2 INSPECTION AND SERVICE INSTRUCTIONS .....	45
9.2.1 Care and Cleaning .....	45
9.2.2 Axle Bolts, Frame, Suspension and Structure .....	45
9.2.3 Trailer Structure .....	45
9.2.3.1 Fasteners and Frame Members .....	45
9.2.3.2 Welds .....	46
9.2.4 Drop Ramp Torsion Springs .....	46
9.2.5 Trailer Brakes .....	46
9.2.5.1 Brake Shoes and Drums .....	46
9.2.5.2 Manually Adjusting Brake Shoes .....	46
9.2.5.3 Brakes, Electric .....	47
9.2.5.3-A Breakaway Brake .....	47
9.2.5.3-A(i) Breakaway Battery .....	47
9.2.5.3-A(ii) Breakaway Switch .....	47
9.2.5.3-B Tow Vehicle Operated Electric Brakes .....	47
9.2.5.3-C Magnets for all Electric Brakes .....	47
9.2.5.4 Brakes, Hydraulic .....	47
9.2.5.4-A Electrical-Operated Hydraulic Brakes .....	47
9.2.6 Trailer Connection to Tow Vehicle .....	48
9.2.6.1 Coupler and Ball .....	48
9.2.6.2 Gooseneck .....	48
9.2.6.3 Kingpin and Fifth Wheel .....	48
9.2.7 Landing Leg or Jack .....	48
9.2.8 Lights and Signals .....	48
9.2.9 Accessory Battery .....	48
9.2.10 Tires .....	49
9.2.11 Axles .....	50
9.2.12 Wheel Rims .....	50
9.2.13 Wheels, Bearings and Lug Nuts .....	50
9.2.13.1 Unsealed Bearings (Hub) .....	50
9.2.13.2 Lug Nuts (Bolts) .....	50

THIS PAGE INTENTIONALLY LEFT BLANK

# 1. INTRODUCTION AND WARRANTY INFORMATION

## 1.1 INTRODUCTION

Everyone at Elite Trailer Manufacturing, LLC. Thanks You for the purchase of your Elite trailer. Since the inception of our company in 1994, Elite Trailer Manufacturing, LLC. takes pride in producing the finest built trailer available. We are dedicated to providing safe and durable trailers that provide complete customer satisfaction.

Safety is our greatest priority in building your trailer. It is very important, as the trailer owner, for you to understand the capabilities of your trailer. This manual explains the operation of your trailer and serves as a guide to safe use. Read this manual before using your trailer. This manual does not cover the living quarters, if so equipped. You must also read the manuals supplied by the living quarters company, tow vehicle, and trailer hitch manufacturers along with this manual. Keep all manuals provided with your trailer in a safe place in the trailer at all time.

Your trailer is built with various components produced by other manufacturers. Some of these items have separate instruction manuals. Where this manual indicates that you should read another manual, and you do not have this manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for assistance.

## 1.2 WARRANTY

### 1.2.1 WARRANTY PROCEDURE GUIDE

#### Making a Claim:

Review the Elite Trailer Manufacturing, LLC. warranty statement (Section 1.2.2) for the product in question, if the components are within the stated coverage period, continue below.

#### Record the following information:

- VIN number of trailer. (Located on the Certification/VIN label mounted on the left side of the trailer. It is also stamped in the aluminum of the gooseneck street side of the trailer.) Record all 17 digits of the VIN. See Fig. 1
- Date trailer was originally purchased and the name of the dealer purchased from. Also known as the Dealer of Purchase.
- Part number and/or description of the failed or problem component and photos of the failed item(s).

#### Warranty starting date:

The starting date shall be determined by the date of sale to the original purchaser.

#### Warranty Policy on returned item(s) manufactured by Elite Trailer Manufacturing, LLC. and/or vendors:

##### Items Manufactured by Elite Trailers Manufacturing, LLC.

- Call the dealer from which you purchased your trailer and forward earlier recorded information along with a description and photo(s) of issue.
- The dealer will contact Elite Trailer Manufacturing, LLC. and obtain a claim number/authorization prior to repairs being performed. This is also known as an Application for Adjustment ("AFA").
- Item(s) manufactured by Elite Trailer Manufacturing, LLC. may require the item(s) to be returned to the Elite Trailer Manufacturing, LLC. factory. Warranty claims for Structural Repairs will require the trailer to be returned and repaired exclusively at Elite Trailers Manufacturing, LLC. factory, transportation charges to and/or from the factory will not be provided or reimbursed by Elite Trailer Manufacturing, LLC.

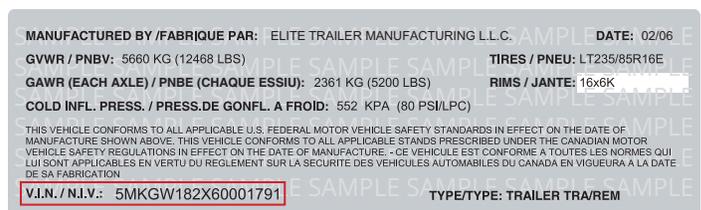


Fig.1 Sample VIN Certification Label (VIN Number)

##### Items NOT Manufactured by Elite Trailers Manufacturing, LLC.

Components not manufactured by Elite Trailer Manufacturing, LLC. are covered only by the warranties extended by the manufacturers of such components, and not by Elite Trailer Manufacturing, LLC. Such components include by are not limited to: tires, wheels, coupler, jacks, hub caps, axles, suspension components, hubs, drums, brakes and all parts associated therewith. Request for warranty adjustments on these items shall be made directly to their manufacturers.

- Call the dealer from which you purchased your trailer and forward information along with photos of failed item(s), the dealer will notify Elite Trailer Manufacturing, LLC. of the failed vendor item and will obtain information on the vendors name and/or address and /or authorization for repairs.
- Vendors require the return of the item(s) within 10 day from the issuance of the claim number. (Claims with items returned , exceeding 30 days will automatically be closed without notification.) Please allow up to two weeks for the evaluation and determination of the claim.
- All return item(s) mu be pre-paid. (No COD accepted.)
- Replacement items can be requested when filing a claim. However, replacement parts will be invoiced, including freight. Reimbursement for the replacement item will be dependent upon the evaluation and determination of the claim.

Warranty work should not begin until Elite Trailer Manufacturing, LLC. and/or vendor issues a written approval for parts replacement, repairs and/or labor allowance if applicable.

### 1.2.2 MANUFACTURERS WARRANTY

*(Revised Warranty for model years 2008 and newer)*

From the original purchase and for a period of eight (8) years on a horse trailer model or five (5) years on all other products. Elite Trailer Manufacturing, LLC. will warrant its product to be free from defective workmanship and material. The original warranty must be completed with original purchaser information by an authorized Elite dealer (Dealer of Purchase) and returned to Elite Trailer Manufacturing, LLC. at the above address. Such warranty shall be extended only to the Original Purchaser.

The warranty extended hereby covers only the "Frame Assembly" i.e. the side rails, side and roof extrusion, floor cross members, and subframe assemblies. Components such as door, gates, dividers and such other material as are attached directly to the Frame Assembly shall be limited in warranty to one (1) year from the date of ORIGINAL PURCHASE.

Elite Trailer Manufacturing, LLC. does not warrant components NOT manufactured by Elite Trailer Manufacturing, LLC., such as axles, tires, wheels, couplers, or jacks. Warranty on paint and other exterior surfaces excludes deterioration or damage from any road elements, improper wash solvents, sand, salt or other weather conditions.

Normal wear on any item will not be subject to warranty. Normal wear items include bearings, brake linings, light bulbs and hoses; but are not limited exclusively to these items. Any damage caused by failing to check and torque lug nuts properly shall not be covered by Elite Trailer Manufacturing, LLC. This warranty does not cover damage caused by exceeding normal use and by commercial applications.

All warranty repairs must be pre-authorized with an "AFA" (Application for Adjustment) number before any reimbursements shall be made. This warranty is limited to repairing or replacing any parts which have been determined by Elite Trailer Manufacturing, LLC. to be defective in workmanship or material.

All returned parts must be sent prepaid to Elite Trailer Manufacturing, LLC. Photographs of items that are thought to be defective may be requested before any warranty can be approved by Elite Trailer Manufacturing, LLC. If any warranty work is to be done on the trailer, the customer will be requested to deliver the trailer to a pre-authorized repair facility. All freight charges to or from the factory or pre-authorized repair facility is the responsibility of the purchaser. *ALL FREIGHT IS EXEMPT FROM WARRANTY.*

This warranty does not cover any economic loss including without limitation; payment for the loss of time or pay, inconvenience, loss of trailer use, trailer rental expense, lodging, meals, other travel costs, storage charges and other incidental or consequential loss or damage of whatsoever nature.

Any damage caused by accident or negligence or by any abuse or misuse of the trailer or its component parts, shall not be the responsibility of the manufacturer.

Any and all warranties shall be null and void if the trailer is loaded in excess of the approved gross vehicle load ratings as stated on the serial plate or VIN certification label. Without any prior approval or knowledge, any modifications, any alterations or repair to any product or part manufactured by Elite Trailer Manufacturing, LLC. will void *IN ITS ENTIRETY*, the manufacturer's warranty.

#### **EXCLUSION OF LIVING QUARTERS AND INSTALLATION BY OTHER PERSONS OR THIRD PARTY**

Elite Trailer Manufacturing, LLC. manufactures some trailers into which other persons or companies who are not employees or agents of Elite Trailer Manufacturing, LLC. install living quarters or other interior or exterior features or modifications. This Limited Warranty extends only to material used or workmanship performed by Elite Trailer Manufacturing, LLC. in the construction of the original trailer, subject to all limitations and exclusions set forth herein.

ELITE TRAILER MANUFACTURING, LLC. EXPRESSLY DISCLAIMS AND EXCLUDES ANY RESPONSIBILITY OR LIABILITY FOR ANY MATERIALS OR WORKMANSHIP IN ANY ITEMS INSTALLED INTO ELITE TRAILER MANUFACTURING, LLC. PRODUCTS BY ANY OTHER PERSON OR COMPANY, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR CONTINGENT LIABILITIES ARISING THEREFROM.

#### **DISCLAIMERS**

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER EXPRESSED WARRANTIES AND REPRESENTATIONS. ELITE TRAILER MANUFACTURING, LLC. MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH RESPECT TO ELITE TRAILER MANUFACTURING, LLC. WHETHER AS TO THE MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY OTHER MATTER. NO ONE, INCLUDING AN AUTHORIZED ELITE TRAILER MANUFACTURING, LLC. DEALER, IS AUTHORIZED TO MAKE FURTHER OR ADDITIONAL WARRANTIES ON BEHALF OF ELITE TRAILER MANUFACTURING, LLC. ■

## 2. GENERAL SAFETY INFORMATION

### 2.1. SAFETY ALERT SYMBOLS AND SIGNAL WORDS

An Owner's Manual that provides general trailer information cannot cover all of the specific details necessary for the proper combination of every trailer, tow vehicle and hitch. Therefore, you must read, understand and follow the instructions given by the two vehicle and trailer hitch manufacturer, as well as the instructions in this manual.

Our trailers are built with components produced by various manufacturers. Some of these items have separate instruction manuals. Where this manual indicates that you should read another manual, and you do not have that manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for assistance.

The safety information in this manual is denoted by the safety alert symbol: 

The level of risk is indicated by the following signal words.

 <b>DANGER</b>
<b>DANGER</b> - Immediate hazards which WILL result in severe personal injury or death if the warning is ignored.

 <b>WARNING</b>
<b>WARNING</b> - Hazards or unsafe practice which COULD result in severe personal injury or death if the warning is ignored.

 <b>CAUTION</b>
<b>CAUTION</b> - Hazards or unsafe practices which could result in minor or moderate injury if the warning is ignored.

 <b>NOTICE</b>
<b>NOTICE</b> - Practices that could result in damage to the trailer or other property.

### 2.2. MAJOR HAZARDS

Loss of control of the trailer or trailer/tow vehicle combination can result in death or serious injury. The most common causes for loss of control of the trailer are:

- Improper sizing the trailer for the tow vehicle, or vice versa.
- Excessive Speed: Driving too fast for the conditions.
- Failure to adjust driving behavior when towing a trailer.
- Overloading and/or improper weight distribution.
- Improper or mis-coupling of the trailer to the hitch.
- Improper braking and steering under sway conditions.
- Not maintaining proper tire pressure.
- Not keeping lug nuts tight.

 <b>WARNING</b>
<b>WARNING</b> - Stainless Steel has a reflective mirror finish. This can magnify sunlight and cause a fire due to extreme heat.

#### 2.2.1 IMPROPER SIZING OF THE TRAILER TO THE TOW VEHICLE

Trailers that weigh too much for the towing vehicle can cause stability problems, which can lead to death or serious injury. Furthermore, the additional strain put on the engine and drivetrain may lead to serious tow vehicle maintenance problems. For these reasons the maximum towing capacity of your towing vehicle, in terms of maximum Gross Trailer Weight (GTW) and maximum Gross Combined Weight Rating (GCWR) can be found in the tow vehicles Owner's Manual.

 <b>DANGER</b>
<b>DANGER</b> - Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.
Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control, and may lead to death or serious injury.
Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

#### 2.2.2 DRIVING TOO FAST

With ideal road conditions, the maximum recommended speed for safely towing a trailer is 60 mph (96 km/h). If you drive too fast, the trailer is more likely to sway, thus increasing the possibility for loss of control. Also, your tires may overheat, thus increasing the possibility of a blowout.

### WARNING

**WARNING** - Driving too fast for conditions can result in loss of control and cause death or serious injury.

Decrease your speed as road, weather and lighting conditions deteriorate.

#### 2.2.3 FAILURE TO ADJUST DRIVING BEHAVIOR WHEN TOWING A TRAILER

When towing a trailer, you will have decreased acceleration, increased stopping distance, and increased turning radius (which means you must make wider turns to keep from hitting curbs, vehicles, and anything else that is on the inside corner). Furthermore the trailer will change the handling characteristics of your towing vehicle, making it more sensitive to steering inputs and more likely to be pushed around in windy conditions or when being passed by large vehicles. In addition, you will need a longer distance to pass, due to slower acceleration and increased length. With these caveats in mind:

Be alert for slippery conditions. You are more likely to be affected by slippery road surfaces when driving a tow vehicle with a trailer, than driving a tow vehicle without a trailer. Anticipate the trailer "swaying." Swaying can be caused by excessive steering, wind gusts, roadway edges, or by the trailer reaction to the pressure wave created by passing trucks and buses.

When encountering trailer sway take your foot off the gas, and steer as little as possible in order to stay on the road. Use small "trim-like" steering adjustments. DO NOT attempt to steer out of the sway; you will only make it worse. Also do not apply the tow vehicle brakes to correct trailer swaying. On the other hand, application of the trailer brakes alone will tend to straighten out the combination, especially when going downhill. Check rearview mirrors frequently to observe the trailer and traffic.

Use lower gear when driving down steep or long grades. use the engine and transmission as a brake. Do not ride the brakes, as they can overheat and become ineffective.

Be aware of your trailer height, especially when approaching bridges, roofed areas and around trees.

#### 2.2.4 TRAILER NOT PROPERLY COUPLED TO THE HITCH

It is critical that the trailer be securely coupled to the hitch ball, and that the safety chains and emergency break-away brake cable are correctly attached. Uncoupling may result in death or serious injury to you and to others.

### WARNING

**WARNING** - Proper selection and condition of the coupler and hitch are essential to safely towing your trailer. A loss of coupling may result in death or serious injury.

- Be sure the hitch load rating is equal to or greater than the load rating of the coupler.
- Be sure the hitch size matches the coupler size.
- Observe the hitch for wear, corrosion and cracks before coupling. Replace worn, corroded or cracked hitch components before coupling the trailer to the tow vehicle.
- Be sure the hitch components are tight before coupling the trailer to the tow vehicle.

### DANGER

**DANGER** - An improper coupled trailer can result in death or serious injury.

Do NOT move the trailer until:

- The coupler is secured and locked to the hitch.
- The safety chains are secured to the tow vehicle.
- The trailer jack(s) are fully retracted.

Do NOT tow the trailer on the road until:

- Tires and wheels are checked.
- The trailer brakes are checked.
- The breakaway switch is connected to the tow vehicle.
- The load is secured to the trailer.
- The trailer lights are connected and checked.

#### 2.2.5 PROPER USE OF SAFETY CHAINS

If your trailer comes loose from the hitch for any reason, we have provided safety chains so that control of the trailer can still be maintained.

### WARNING

**WARNING** - Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle.

- Fasten safety chains to frame of tow vehicle. Do not fasten chains to any part of the hitch unless the hitch has holes or loops specifically for that purpose.
- On Bumper Pull models cross chains underneath hitch and coupler with enough slack to permit turning and to hold tongue up, if the trailer comes loose.

**2.2.6 PROPER CONNECTION OF BREAKAWAY BRAKE**

Your trailer will be equipped with a breakaway brake system that can apply the brakes on your trailer if your trailer comes loose from the hitch ball for any reason. You will have a separate set of instructions for the breakaway brake. The breakaway brake system, including battery, must be in good condition and properly rigged to be effective.

 **WARNING**

**WARNING** - An ineffective or inoperative breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or hitch fails.

The breakaway cable (lanyard) must be connected to the tow vehicle, and NOT to any part of the hitch.

Before towing the trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do NOT tow the trailer. You must have your breakaway brake system serviced or repaired.

**2.2.7 MATCHING TRAILER AND HITCH**

It is critical that the trailer be securely coupled to the hitch ball, and that the safety chains and emergency breakaway brake cable are correctly attached. Uncoupling may result in death or serious injury to you and to others.

 **DANGER**

**DANGER** - Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control, and may lead to death or serious injury.

Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

**2.2.8 WORN TIRES, LOOSE WHEELS AND LUG NUTS**

Just as with your tow vehicle the trailer tires and wheels are important safety items. Therefore, it is essential to inspect the trailer tires before each tow.

If a tire has a bald spot, bulge, cut, cracks, or is showing any cords, replace the tire before towing. If a tire has uneven tread wear, take the trailer to a dealer service center for diagnosis. Uneven tread wear can be caused by tire imbalance, axle misalignment or incorrect inflation.

Tire with too little tread will not provide adequate frictional forces on wet roadways and can result in loss of control, leading to death or serious injury.

Improper tire pressure causes increased tire wear and may reduce trailer stability, which can result in a tire blowout or possible loss of control. Therefore, before each tow you must also check the tire pressure. Remember, the proper tire pressure is listed on the VIN Certification label, normally mounted on the front left side of the trailer, and should be checked when tires are cold. See Fig. 2 Allow 3 hours of cool-down after driving as much as 1-mile/kilometer at 40 mph (64 km/h) before checking tire pressure.



Fig.2 Sample VIN Certification Label (Tire Pressure)

 **WARNING**

**WARNING** - Improper tire pressure can result in a blowout and loss of control, which can lead to death or serious injury.

Be sure tires are inflated to pressure indicated on sidewall of trailer tire before towing trailer.

The tightness or torque of the lug nuts is very important in keeping the wheels properly seated to the hub. Before each tow of your trailer, check to make sure they are tight.

 **WARNING**

**WARNING** - Metal creep between the wheel rim and lug nuts will cause rim to loosen and could result in a wheel coming off, leading to death or serious injury.

Tighten lug nuts before each towing of your trailer.

**2.2.9 THE PROPER TIGHTNESS (TORQUE) FOR LUG NUTS**

The proper torque of your lug nuts is listed in the "Inspection and Service Instructions" chapter of this manual. Use a torque wrench to tighten the lug nuts, use the crisscross star pattern diagram on page 51 of this manual. If you do not have a torque wrench, use a lug wrench (from your tow vehicle) and tighten the nuts as much as you can. At the first opportunity, have a service garage or trailer dealer tighten the lug nuts to the proper torque.

Lug nuts are also prone to loosen after first being assembled.

When towing a new trailer (or after wheels have been remounted), check to make sure they are tight after the first 10, 25 and 50 miles of towing and before each tow thereafter.

Failure to perform this check can result in a wheel separating from the trailer and a crash, leading to death or serious injury.

**! WARNING**

**WARNING** - Lug nuts are prone to loosen after initial installation, which can lead to death or serious injury.

Check lug nuts for tightness on a new trailer or when wheel(s) have been remounted after the first 10, 25 and 50 miles of towing.

**! WARNING**

**WARNING** - Improper lug nut torque can cause a wheel separating from the trailer, leading to death or serious injury.

Be sure lug nuts are tight before each tow.

**2.2.10 IMPROPER LOADING**

The total weight of the load you put in or on the trailer, plus the empty weight of the trailer itself, must not exceed the trailer's Gross Vehicle Weight Rating (GVWR). If you do not know the empty weight of the trailer plus the cargo weight, you must weigh the loaded trailer at a commercial scale. In addition, you must distribute the load in the trailer such that the load on any axle does not exceed the Gross Axle Weight Rating (GAWR). If your trailer is equipped with a Tire and Loading Information Placard, mounted next to the VIN Certification Label, the cargo capacity weight stated on that placard is only a close estimate. The GVWR and GAWR's are listed on the VIN Certification Label mounted on the front left side of the trailer. See Fig. 3

**! WARNING**

**WARNING** - An overloaded trailer can result in loss of control of the trailer, leading to death or serious injury.

Do not exceed the trailer Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR).

Do not load a trailer so that the weight on any tire exceeds its rating.

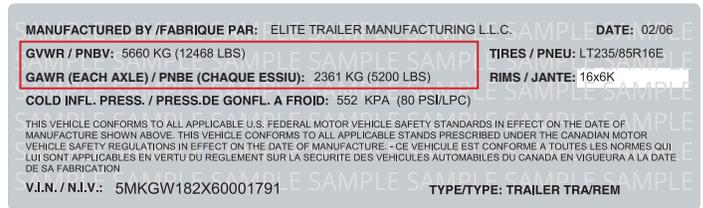


Fig.3 Sample VIN Certification Label (GVWR and GAWR)

**2.2.11 UNSAFE LOAD DISTRIBUTION**

Improper front/rear load distribution can lead to poor trailer sway stability or poor tow vehicle handling. Poor trailer sway stability results from tongue weights that are too high. Refer to Chapter heading "Loading the Trailer" for more information.

In the table below, the second column shows the rule of thumb percentage of total weight of the trailer plus its cargo (Gross Trailer Weight - GTW) that should appear on the tongue of the trailer. For example, a trailer with a gooseneck hitch, with a loaded weight of 12,000 pounds / 5,443.11 kilograms, should have 20-25% of 12,000 lbs. / 5,443.11 kg (2,400-3,000 lbs. / 1,088.62-1,360.77 kg) on the gooseneck.

After loading, be sure to check that none of the axles are overloaded.

Tongue Weight as a Percentage of Loaded Trailer Weight	
Type of Hitch	Percentage (%)
Ball Hitch (Bumper Pull) Small Trailer	6 - 10 %
Ball Hitch (Bumper Pull) Large Trailer	10 - 15 %
Gooseneck and Fifth Wheel Hitch	20 - 25 %

The numbers quoted above are for example purposes only and should be tailored to the specific trailer. For questions regarding the actual percent of tongue weight for your specific trailer, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

Uneven left/right load distribution can cause tire, wheel, axle or structural failure. Be sure your trailer is evenly loaded left / right. Towing stability also depends on keeping the center of gravity as low as possible.

**! WARNING**

**WARNING** - Improper tongue weight (load distribution) can result in loss of control of the trailer, leading to death or serious injury. Make certain that tongue weight is within the allowable range.

Be sure to:

- Distribute the load front-to-rear to provide proper tongue weight. (See Table Above.)
- Distribute the load evenly, right and left, to avoid tire overload.
- Keep the center of gravity low.

### 2.2.12 SHIFTING CARGO

Since the trailer "ride" can be bumpy and rough, you must secure your cargo so that it does not shift while the trailer is being towed.

#### WARNING

**WARNING** - Shifting cargo can result in loss of control of the trailer, and can lead to death or serious injury.

Tie down all loads with proper sized fasteners, ropes, straps, etc.

If the door latch is equipped with a catch that has a hole for a linchpin, use a linchpin to prevent the door latch from opening.

#### WARNING

**WARNING** - If the door opens, your cargo may be ejected onto the road, resulting in death or serious injury to other drivers.

Always secure the door latch after closing.

### 2.2.13 INAPPROPRIATE CARGO

Your trailer may be designed for specific cargo, for example, only for horses. If your trailer is designed for specific cargo, only carry that cargo in the trailer. A utility trailer must not be used to carry certain items, such as people, containers of hazardous substances or containers of flammable substances.

#### WARNING

**WARNING** - Do not transport people inside the trailer, even if it has living quarters. The transport of people puts their lives at risk and may be illegal in your State or Province.

#### WARNING

**WARNING** - Do not transport flammable, explosive, poisonous or other dangerous materials in your trailer.

### 2.2.14 INOPERABLE BRAKES, LIGHTS AND MIRRORS

Be sure that the electric brakes and all of the lights on your trailer are functioning properly before towing your trailer. Electric brakes and lights on a trailer are controlled via a connection to the tow vehicle, generally a multi-pin electrical connector. Check the trailer tail lights by turning on your tow vehicle headlights. Check the trailer brake lights by having someone step on the tow vehicle brake pedal while you look at trailer lights. Do the same thing to check the turn signal lights. If your trailer has electric brakes, your tow vehicle will have

an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate. While towing the trailer at less than 5 mph (8 km/h), manually operate the electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

#### WARNING

**WARNING** - Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes, and can lead to collision.

Before each tow:

- Check that the taillights, brake lights and turn signals work properly and are in good condition.
- Check that the electric brakes work by operating the brake controller inside the tow vehicle.

Standard mirrors usually do not provide adequate visibility for viewing traffic to the sides and rear of a towed trailer. You must provide mirrors on the tow vehicle that allow you to safely observe approaching traffic.

### 2.2.15 HAZARDS FROM MODIFYING YOUR TRAILER

Essential safety items can be damaged by altering your trailer. Even simply driving a nail or screw to hang something can damage an electrical circuit, LP gas line or other feature of the trailer.

Before making any alteration to your trailer, contact your dealer or Elite Trailer Manufacturing, LLC. at (405) 745-5757 and describe the alteration you are contemplating. Alteration of the trailer structure or modification of mechanical, electrical, plumbing, heating or other systems on your trailer must be performed only by a qualified technicians who are familiar with the system as installed on your trailer.

### 2.2.16 HAZARDS TO HORSES (HORSE TRAILER)

Before hauling a horse, you must be aware of its temperament.

The layout of a horse trailer is designed to safely contain your horse. The trailers equipped with stall dividers and tie rings to secure the horse, and has a rubber floor mat to keep shod horses from slipping on the metal underfloor. Restraining a horse without using a combination of a tie-strap and stall dividers may result in serious injury or death to the horse.

Before loading your horse, inspect the interior of the horse trailer to insure that no hazards are present. Read the "Loading the Horse Trailer" section on Page 36 of this manual for specific instructions regarding trailering of horses.

**! WARNING**

**WARNING** - When a horse is frightened, it is capable of inflicting serious injury or death to a human handler.

Know your horse's temperament before attempting to trailer it.

Handling a horse that is not trailer-acclimated may result in injury or death, or damage to your trailer.

Do not haul an unbroken horse in your trailer. All horses must have a halter.

**! CAUTION**

**CAUTION** - Failure to secure a horse using a tie strap may result in serious injury or death to the horse.

**! CAUTION**

**CAUTION** - The trailer interior may contain hazards to a horse that can result in serious injury or death to the horse.

Before loading a horse, inspect the trailer interior and adjust or repair all loose and protruding features such as handles, loose or broken parts of the trailer, etc.

Before towing trailer:

- Lock all stall dividers.
- Be sure all saddles, tack and equipment, as well as horses, are prevented from being thrown about.

**! CAUTION**

**CAUTION** - Hauling a horse in a livestock trailer may result in serious injury or death to the horse.

Do not carry a horse in a livestock trailer. Only use a trailer designed to carry horses.

**2.2.17 HAZARDS TO LIVESTOCK (LIVESTOCK TRAILER)**

A livestock trailer is designed for the safe transport of livestock, other than horses. It is not equipped for hauling horses.

Before loading your livestock, inspect the interior of the livestock trailer to insure that no hazards are present. Read section 5.2.3, "Loading Livestock (Livestock Trailer)" on Page 41 for specific instructions regarding trailering of livestock other than horses.

**! WARNING**

**WARNING** - Large animals are capable of inflicting serious injury or death to a human handler.

Know your animals' temperament before attempting to trailer them.

**2.2.18 HAZARDS FROM ACCESSORIES**

Read and follow all of these instructions before operating the listed accessories. The major hazards from some of these accessories are:

**2.2.18.1 - Generator**

If your trailer is equipped with a gasoline or diesel generator, you must have and follow the generator manufacturer's instructions. You must also have one or more carbon monoxide detectors in the trailer's accommodation spaces.

Carbon Monoxide is an odorless gas that can cause death. Be certain exhaust from a running generator does not accumulate in or around your trailer, by situations such as:

- Being drawn in by fans or ventilators operated in a trailer.
- Prevailing wind.
- Being trapped between your trailer and other trailers, vehicles, buildings other objects or obstructions.

**! WARNING**

**WARNING** - Operating gasoline and diesel generators can lead to serious injury or death by:

- Carbon Monoxide
- Fire and Explosion
- Electrocution

Have a working Carbon Monoxide detector in the accommodation spaces before operating a generator.

Do not refuel a running generator or refuel near ignition sources.

**2.2.18.2 - Shore Power**

"Shore Power" is the name given to connecting your trailer to a source of electrical power using an extension cord specifically designed for that purpose.

**! WARNING**

**WARNING** - Shore Power poses a risk of death due to electrocution or fire.

- Always use an electrical cord specifically designed for shore power connectivity. Never use an ordinary extension cord.
- Always connect the electrical cord to a grounded source of shore power.
- Do not remove the "third prong" from the shore power plug.
- Connect only to a source of proper voltage.
- Make certain polarity is correct.
- Do not overload electrical circuits.
- Always replace fuses or circuit breakers with correct rating.

**! DANGER**

**DANGER** - Risk of fire or explosion.

If LP gas is detected (by smell or by the LP gas detector):

- Do not touch electrical switches.
- Extinguish flames and pilot lights.
- Open doors for ventilation.
- Shut off LP gas supply at the LP tank.
- Leave the area until odor clears.

Correct the source of LP gas leakage before using LP appliances.

Do not use a flame to locate the source of an LP gas leak.

2.2.18.3 - LP Gas Fuel System

**! WARNING**

**WARNING** - You can die or suffer brain damage by Carbon Monoxide.

Make certain the exhaust from LP appliances is directed to the outdoors.

have a working Carbon Monoxide detector in the accommodation spaces of your trailer before operating any LP gas appliances.

Do not operate portable grills or stoves inside the trailer.

2.2.19 SAFETY WARNING LABELS ON YOUR TRAILER

2.2.19.1 - Gooseneck Trailer Warning Label Locations



Fig.4 Gooseneck Safety Warning Labels (Top of Coupler)

**! DANGER**

**DANGER** - Risk of death due to fire or explosion.

Only connect an LP gas system to a supply of LP gas, NOT natural gas.

Do not store LP gas tanks inside the trailer.

Only fill an LP gas tank 80% full.

Only fill the tank with LP gas (butane or propane).

Overfilled tanks can release gas and cause an explosion.



Fig.5 Gooseneck Safety Warning Labels (Bottom of Coupler)

**! DANGER**

**DANGER** - Risk of fire or explosion.

Never use a flame, heat lamp or hair dryer to thaw an LP gas regulator. Use an incandescent light bulb.

Do not remove the regulator cover or attempt to service the LP gas regulator.

- A - Part Number 104115 ( Gooseneck Combo Towing )
- B - Part Number 104114 ( Do Not Operate )
- C - Part Number 104261 ( Trailer Must Be Level )
- D - Part Number 102723 ( Wiring Diagram )
- E - Part Number 102723 ( Coupler Must Be Closed )

## 2.2.19.2 - Bumper Pull Trailer Warning Label Locations



Fig.6 Bumper Pull Safety Warning Labels

- B - Part Number 104114 ( Do Not Operate )
- C - Part Number 104261 ( Trailer Must Be Level )
- D - Part Number 102723 ( Wiring Diagram )
- F - Part Number 104116 ( Bumper Pull Towing )

**WARNING**

**WARNING** - To protect you and others against serious injury or death, all of the labels shown in Figure 4, 5 and 6 must be on the trailer and must be legible.

If any of these labels are missing or cannot be read, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for free replacement safety warning labels.

You will need to provide Elite Trailer Manufacturing, LLC. with the Part Number in order to send the correct one(s).

## 2.2.20 TRAILER TOWING GUIDE

Driving a vehicle with a trailer in tow is vastly different from driving the same vehicle without a trailer in tow. Acceleration, maneuverability and braking are all diminished with a trailer in tow. It takes longer to get up to speed; you need more room to turn and pass, and more distance to stop when towing a trailer. You will need to spend time adjusting to the different feel and maneuverability of the tow vehicle with a loaded trailer. Because of the significant differences in all aspects of maneuverability when towing a trailer, the hazards and risks of injury are also much greater than when driving without a trailer. You are responsible for keeping your vehicle and trailer in control, and for all the damage that is caused if you lose control of your vehicle and trailer.

As you may have done when learning to drive an automobile, find an open area with little or no traffic for your first practice trailering. Of course, before you start towing the trailer, you must follow all of the instruction for inspection, testing, loading and coupling. Also, before you start towing, adjust the mirrors so you can see the trailer as well as the area to the rear of it.

Drive slowly at first, 5 mph (8 km/h) or so, and turn the wheel to get the feel of how the tow vehicle and trailer combination responds. Next, make some right and left hand turns. Watch in your side mirrors to see how the trailer follows the tow vehicle. Turning with a trailer attached requires more room.

Stop the rig a few times from speeds no greater than 10 mph (16 km/h). If your trailer is equipped with brakes, try using different combinations of trailer/electric brakes have when they are the only brakes used. When properly adjusted, the trailer brakes will come on just before the tow vehicle brakes.

It will take practice to learn how to back up a tow vehicle with a trailer attached. Take it slow. Before backing up, get out of the tow vehicle and look behind the trailer to make sure that there are no obstacles. Some drivers place their hands at the bottom of the steering wheel, and while the tow vehicle is in reverse, "think" of the hands as being on the top of the wheel. When the hands move to the right (counter-clockwise, as you would do to turn the tow vehicle to the left when moving forward), the rear of the trailer moves to the right. Conversely, rotating the steering wheel clockwise with your hands at the bottom of the wheel will move the rear of the trailer to the left, while backing up. If you are towing a bumper hitch rig, be careful not to allow the trailer to turn too much, because it will hit the rear of the tow vehicle. To straighten the rig, either pull forward, or turn the steering wheel in the opposite direction.

## 2.2.21 REPORTING SAFETY DEFECTS

If you believe that your vehicle has a defect that could cause a crash or could cause injury or death, you should immediately inform the *National Highway Traffic Safety Administration* (NHTSA) in addition to notifying Elite Trailer Manufacturing, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Elite Trailer Manufacturing, LLC.

To contact NHTSA, you may either call the Vehicle Safety Hotline toll-free at 1 (888) 327-4236 (TTY 1 (800) 424-9153), visit their website at <http://www.nhtsa.gov/> or write to:

**Administrator**  
National Highway Traffic Safety Administration  
1200 New Jersey Ave., S.E.  
Washington, DC 20590

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov/>

## 2.3 SAFE TRAILER TOWING GUIDELINES

- Recheck the load tiedowns to make sure the load will not shift during towing.
- Before towing, check coupling, safety chains, safety brake, tires, wheels and lights.
- Check the lug nuts or bolts for tightness.
- Check coupler tightness after towing 50 miles.
- Adjust the brake controller to engage the trailer brakes before the tow vehicle brakes. Follow the instructions given with the brake controller manufacturer's literature.
- Use your mirrors to verify that you have room to change lanes or pull into traffic.
- Use your turn signals well in advance.
- Allow plenty of stopping space for your trailer and tow vehicle.
- Do not drive so fast that the trailer begins to sway due to speed. Generally never drive faster than 60 mph (96 km/h).
- Allow plenty of room for passing. A rule of thumb is that the passing distance with a trailer is 4 times the passing distance without a trailer.
- Shift your automatic transmission into a lower gear for city driving.
- Use lower gears for climbing and descending grades.
- Do not ride the brakes while descending grades, they may get so hot that they stop working. Then you will potentially have a runaway tow vehicle and trailer.
- To conserve fuel, don't use full throttle to climb a hill. Instead, build speed on the approach.
- Slow down for bumps in the road. Take your foot off the brake when crossing the bump.
- Do not brake while in a curve unless absolutely necessary. Instead, slow down before you enter the curve.
- Do not apply the tow vehicle brakes to correct extreme trailer swaying. Instead, lightly apply the trailer brakes with the hand controller.
- Make regular stops, about once each hour. Confirm that:
  - The coupler is secure to the hitch and is locked.
  - Electrical connectors are connected and lights are working.
  - There is appropriate slack in the safety chains.
  - There is appropriate slack in the breakaway switch pull pin cable.
  - The tires are not visibly low on pressure.
  - The cargo is secure and in good condition.

## 3. TIRE SAFETY INFORMATION

This Section contains tire safety information as required by Code of Federal Regulations 49 CFR 575.6.

### 3.1 STEPS FOR DETERMINING CORRECT LOAD LIMIT - TRAILER

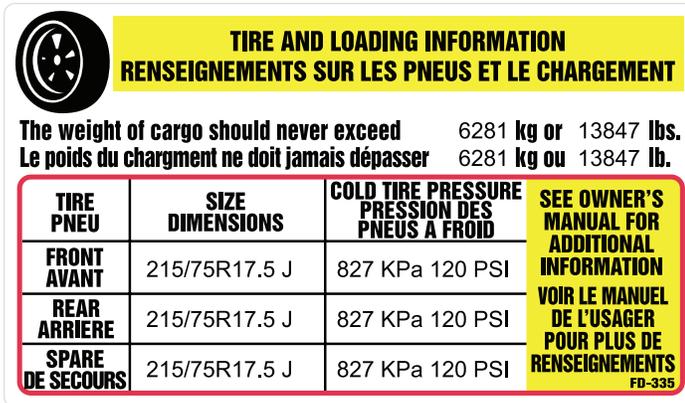


Fig.7 Tire and Loading Information Placard

#### 3.1.1 TRAILERS 10,000 POUNDS GVWR OR LESS

Trailers with 10,000 pounds (4,536 kilograms) Gross Vehicle Weight Rating (GVWR) or less, are required to have a tire information placard. The tire information placard can be found adjacent to or near the trailer's VIN Certification Label. See Fig. 7.

Locate your trailer's tire information placard and follow these steps to determine your trailer's correct load limit:

1. Locate the statement, "The weight of cargo should never exceed XXX kg or XXX lbs." This figure equals the available amount of cargo and luggage load capacity.
2. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity.

#### 3.1.2 TRAILERS OVER 10,000 POUNDS GVWR

Trailers over 10,000 pounds (4,536 kilograms) Gross Vehicle Weight Rating (GVWR) are not required to have a tire information placard.

Follow these steps to determine your trailer's correct load limit:

1. Determine the empty weight of your trailer by weighing the trailer using a public scale or other means.
2. Locate the Gross Vehicle Weight Rating (GVWR) of the trailer on your trailer's VIN Certification Label.
3. Subtract the empty weight of your trailer from the GVWR stated on the VIN Certification Label. That weight is the maximum available cargo capacity of the trailer and may not be safely exceeded. (See Section 5: Loading The Trailer)

### 4. 3.2 STEPS FOR DETERMINING CORRECT LOAD LIMIT - TOW VEHICLE

Follow these steps to determine your tow vehicles correct load limit:

1. Locate the statement, "The combined weight of occupants and cargo should never exceed XXX lbs.," on your tow vehicles placard.
2. Determine the combined weight of the driver and passengers who will be riding in your tow vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kilograms or XXX pounds.
4. The resulting figure equals the available amount of cargo and luggage capacity. For example, if the "XXX" amount equals 1,400 lbs. (635 kg) and there will be five 150 lb. (68.03 kg) passengers in your tow vehicle, the amount of available cargo and luggage capacity is 650 lbs. (294.84 kg). (1,400 - (5x150) = 650)
5. Determine the combined weight of luggage and cargo being loaded on the tow vehicle. That weight may not safely exceed the available cargo and luggage capacity calculated in Step 4.
6. If your tow vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the tow vehicle's manual to determine how this weight transfer reduces the available cargo and luggage capacity of your tow vehicle.

### 3.3 GLOSSARY OF TIRE TERMINOLOGY

#### Accessory Weight

The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

#### Bead

The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

#### Bead Separation

This is the breakdown of the bond between components in the bead.

#### Bias Ply Tire

A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread.

**Carcass**

The tire structure, except tread and sidewall rubber which, when inflated, bears the load.

**Chunking**

The breaking away of pieces of the tread or sidewall.

**Cold Inflation Pressure**

The pressure in the tire before you drive.

**Cord**

The strands forming the plies in the tire.

**Cord Separation**

The parting of cords from adjacent rubber compounds.

**Cracking**

Any parting within the tread, sidewall, or inner liner of the tire extending to cord material.

**CT**

A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire.

**Curb Weight**

The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional weight optional engine.

**Extra Load Tire**

A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

**Groove**

The space between two adjacent tread ribs.

**Innerliner**

The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire.

**Innerliner Separation**

The parting of the innerliner from cord material in the carcass.

**Intended Outboard Sidewall**

The sidewall that contains a white-wall, bears white lettering or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire or the outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle.

**Light Truck (LT) Tire**

A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles.

**Load rating**

The maximum load that a tire is rated to carry for a given inflation pressure.

**Maximum Load Rating**

The load rating for a tire at the maximum permissible inflation pressure for that tire.

**Maximum Permissible Inflation Pressure**

The maximum cold inflation pressure to which a tire may be inflated.

**Maximum Loaded Vehicle Weight**

The sum of curb weight, accessory weight, vehicle capacity weight, and production options weight.

**Measuring Rim**

The rim on which a tire is fitted for physical dimension requirements.

**Non-pneumatic Rim**

A mechanical device which, when a non-pneumatic tire assembly incorporates a wheel, supports the tire, and attaches, either integrally or separably, to the wheel center member and upon which the tire is attached.

**Non-pneumatic Spare Tire Assembly**

A non-pneumatic tire assembly intended for temporary use in place of one of the pneumatic tires and rims that are fitted to a passenger car in compliance with the requirements of this standard.

**Non-pneumatic Tire**

A mechanical device which transmits, either directly or through a wheel or wheel center member, the vertical load and tractive forces from the roadway to the vehicle, generates the tractive forces that provide the directional control of the vehicle and does not rely on the containment of any gas or fluid for providing those functions.

**Non-pneumatic Tire Assembly**

A non-pneumatic tire, alone or in combination with a wheel or wheel center member, which can be mounted on a vehicle.

**Normal Occupant Weight**

This means 68 kilograms (150 lbs.) times the number of occupants specified in the second column of Table I of 49 CFR 571.110.

**Occupant Distribution**

The distribution of occupants in a vehicle as specified in the third column of Table I of 49 CFR 571.110.

**Open Splice**

Any parting at any junction of tread, sidewall, or innerliner that extends to cord material.

**Outer Diameter**

The overall diameter of an inflated new tire.

**Overall Width**

The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

**Ply**

A layer of rubber-coated parallel cords.

**Ply Separation**

A parting of rubber compound between adjacent plies.

**Pneumatic Tire**

A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load.

**Production Options Weight**

The combined weight of those installed regular production options weighing over 2.3 kilograms (5 lbs.) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

**Radial Ply Tire**

A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

**Recommended Inflation Pressure**

This is the inflation pressure provided by the vehicle manufacturer on the Tire Information label and on the Certification / VIN tag.

**Reinforced Tire**

A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

**Rim**

A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

**Rim Diameter**

This means the nominal diameter of the bead seat.

**Rim Size Designation**

This means the rim diameter and width.

**Rim Type Designation**

This means the industry of manufacturer's designation for a rim by style or code.

**Rim Width**

This means the nominal distance between rim flanges.

**Section Width**

The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands.

**Sidewall**

That portion of a tire between the tread and bead.

**Sidewall Separation**

The parting of the rubber compound from the cord material in the sidewall.

**Special Trailer (ST) Tire**

The "ST" is an indication the tire is for trailer use only.

**Test Rim**

The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire.

**Tread**

That portion of a tire that comes into contact with the road.

**Tread Rib**

A tread section running circumferentially around a tire.

**Tread Separation**

Pulling away of the tread from the tire carcass.

**Treadwear Indicators (TWI)**

The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

**Vehicle Capacity Weight**

The rated cargo and luggage load plus 68 kilograms (150 lbs.) times the vehicle's designated seating capacity.

**Vehicle Maximum Load on the Tire**

The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

**Vehicle Normal Load on the Tire**

The load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table I of CRF 49 571.110) and dividing by 2.

**Weather Side**

The surface area of the rim not covered by the inflated tire.

**Wheel Center Member**

In the case of a non-pneumatic tire assembly incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the non-pneumatic rim and provides the connection between the non-pneumatic rim and the vehicle; or, in the case of a non-pneumatic tire assembly not incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the non-pneumatic tire and provides the connection between tire and the vehicle.

**Wheel-holding Fixture**

The fixture used to hold the wheel and tire assembly securely during testing.

### 3.4 TIRE SAFETY - EVERYTHING RIDES ON IT

The National Highway Traffic Safety Administration (NHTSA) has published a brochure (DOT HS 809 361) that discusses all aspects of Tire Safety, as required by CFR 575.6. This brochure is reproduced in part below. It can be obtained and downloaded from NHTSA, free of charge, from the following website:

<https://www.nhtsa.gov/document/tire-every-thing-rides-it-brochure>

Studies of tire safety show that maintaining proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tire or vehicle can safely handle), avoiding road hazards, and inspecting tires for cuts, slashes, and other irregularities are the most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

- Improve vehicle handling.
- Help protect you and others from avoidable breakdowns and accidents.
- Improve fuel economy.
- Increase the life of your tires.

This booklet presents a comprehensive overview of tire safety, including information on the following topics:

- Basic Tire Maintenance
- Uniform Tire Quality Grading System
- Fundamental Characteristics of Tires
- Tire Safety Tips
- 

Use this information to make tire safety a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with the inconvenience and safety consequences of a flat tire or other tire failure.

#### 3.4.1 SAFETY FIRST - BASIC TIRE MAINTENANCE

Properly maintained tires improve the steering, stopping, traction, and load-carrying capability of your vehicle.

Underinflated tires and overloaded vehicles are a major cause of tire failure. Therefore, as mentioned above, to avoid flat tires and other types of tire failure, you should maintain proper tire pressure, observe tire and vehicle load limits, avoid road hazards and regularly inspect your tires.

#### 3.4.2 FINDING YOUR VEHICLE'S RECOMMENDED TIRE PRESSURE AND LOAD LIMITS

Tire information placards and vehicle VIN Certification Labels contain information on tires and load limits. These labels indicate the vehicle manufacturer's information including:

- Recommended tire size
- Recommended tire inflation pressure
- Vehicle Capacity Weight (VCW - the maximum occupant and cargo weight a vehicle is designed to carry)
- Front and rear gross axle weight ratings (GAWR - the maximum weight the axle systems are designed to carry).

Both placards and VIN Certification Labels are permanently attached to the trailer near the left front.

#### 3.4.3 UNDERSTANDING TIRE PRESSURE AND LOAD LIMITS

Tire inflation pressure is the level of air in the tire that provides it with load-carrying capacity and affects the overall performance of the vehicle. The tire inflation pressure is a number that indicates the amount of air pressure - measured in pounds per square inch (PSI) - a tire requires to be properly inflated. (You will also find this number on the VIN Certification Label expressed in kilo-pascals (Kpa), which is the metric measure used internationally.) See Fig. 2 on Page 5.

Manufacturers of passenger vehicles and light trucks determined this number based on the vehicle's design load limit, that is, the greatest amount of weight a vehicle can safely carry and the vehicle's tire size. The proper tire pressure for your vehicle is referred to as the "recommended cold inflation pressure." (As you will read below, it is difficult to obtain the recommended tire pressure if your tires are not cold.) Because tires are designed to be used on more than one type of vehicle, tire manufacturers list the "maximum permissible inflation pressure" on the tire sidewall. This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

#### 3.4.4 CHECKING TIRE PRESSURE

It is important to check your vehicle's tire pressure at least once a month for the following reasons:

- Most tires may naturally lose air over time.
- Tires can lose air suddenly if you drive over a pothole or other object or if you strike the curb when parking.
- With radial tires, it is usually not possible to determine underinflation by visual inspection.

For convenience, purchase a tire pressure gauge to keep in your vehicle. Gauges can be purchased at tire dealerships, auto supply stores, other retail outlets, or online. Be sure to purchase a gauge that has a max reading above your "maximum permissible inflation pressure."

The recommended tire inflation pressure that vehicle manufacturers provide reflects the proper PSI when a tire is cold.

The term cold does not relate to the outside temperature. Rather, a cold tire is one that has not been driven on for at least three hours. When you drive, your tires get warmer, causing the air pressure within them to increase. Therefore, to get an accurate tire pressure reading, you must measure tire pressure when the tires are cold or compensate for the extra pressure in warm tires.

#### 3.4.5 STEPS FOR MAINTAINING PROPER TIRE PRESSURE

1. Locate the recommended tire pressure on the vehicle's tire information placard, VIN Certification Label, or in the Owner's Manual.
2. Before driving, or 3 hours after returning from driving, record the tire pressure of all tires. (Cold tire pressure reading.)
3. If the tire pressure is too high in any of the tires, slowly release air by gently pressing on the tire valve stem with the edge of your tire gauge until you get to the correct pressure.
4. If the tire pressure is too low, note the difference between the measured tire pressure and the correct tire pressure. These "missing" pounds of pressure are what you will need to add.
5. At a service station, add the missing pounds of air pressure to each tire that is underinflated. Remember to take into account that while driving to a service station or air pump, your tire pressure may increase due to the tire warming up.
6. Check all tires to make sure they have the same air pressure (except in cases in which the front and rear tires are supposed to have different amounts of pressure).

If you have been driving your vehicle and think that a tire is underinflated, fill it to the recommended cold inflation pressure indicated on your vehicle's tire information placard or VIN Certification Label. While your tire may still be slightly underinflated due to the extra pounds of pressure in the warm tire, it is safer to drive with air pressure that is slightly lower than the vehicle manufacturer's recommended cold inflation pressure than to drive with a significantly underinflated tire. Since this is a temporary fix, don't forget to recheck and adjust the tire's pressure when you can obtain a cold reading.

#### 3.4.6 TIRE SIZE

To maintain tire safety, purchase new tires that are the same size as the vehicle's original tires or another size recommended by the manufacturer. Look at the tire information placard, the Owner's Manual, or the sidewall of the tire you are replacing to find this information. If you have any doubt about the correct size to choose, consult with the tire dealer or vehicle manufacturer.

#### 3.4.7 TIRE TREAD

The tire tread provides the gripping action and traction that prevent your vehicle from slipping or sliding, especially when the road is wet or icy. In general, tires are not safe and should be replaced when the tread is worn down to 1/16 of an inch (1.6mm). Tires have built-in treadwear indicators that let you know when it is time to replace your tires. Another method for checking tread depth is to place a US penny in the tread with Lincoln's head upside down and facing you. If you can see the top of Lincoln's head, you are ready for new tires.

#### 3.4.8 TIRE BALANCE AND WHEEL ALIGNMENT

To avoid vibration or shaking of the vehicle when a tire rotates, the tire must be properly balanced. This balance is achieved by positioning weights on the wheel to counterbalance heavy spots on the wheel-and-tire assembly. A wheel alignment adjusts the angles of the wheels so that they are positioned correctly relative to the vehicle's frame. This adjustment maximizes the life of your tires. These adjustments require special equipment and should be performed by a qualified technician.

#### 3.4.9 TIRE REPAIR

The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall should not be repaired. Tires must be removed from the rim to be properly inspected before being plugged and patched.

#### 3.4.10 TIRE FUNDAMENTALS

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and also provides a tire identification number for safety standard certification and in case of a recall.

##### 3.4.10.1 - UTQGS Information

###### Treadwear Number

This number indicates the tire's wear rate. The higher the treadwear number is, the longer it should take for the tread to wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.

###### Traction Letter

This letter indicates a tire's ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from highest to lowest as "AA", "A", "B", and "C".


###### Temperature Letter

This letter indicates a tire's resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded.

Excessive speed, underinflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire's resistance to heat is graded as "A", "B", or "C".

3.4.10.2 - Information on Passenger Vehicle Tires

Please refer to the diagram below.

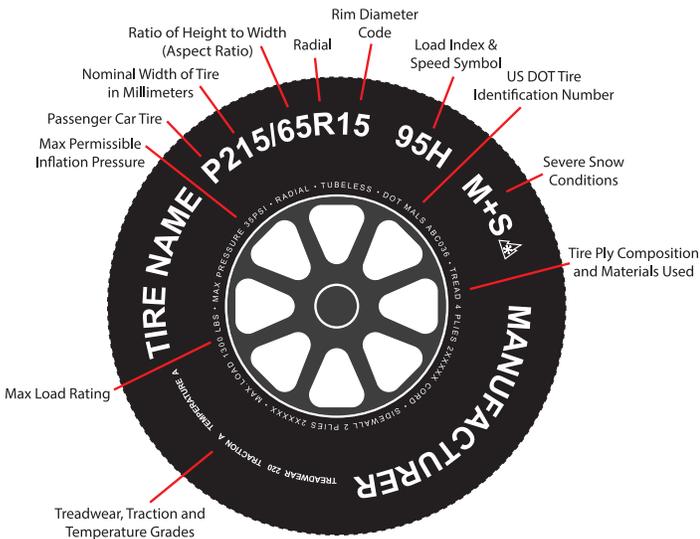

**P**  
The "P" indicates the tire is for a passenger vehicle.

**Next Number (3-Digits)**  
This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire.

**Next Number (2-Digits)**  
This two-digit number, known as the aspect ratio, gives the tire's ratio of height to width. Number of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

**R**  
The "R" stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

**Next Number (2-Digits)**  
This two-digit number is the wheel or "rim" diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

**Next Number (2/3-Digits)**  
This two or three-digit number is the tire's load index. It is a measurement of how much weight each tire can support. you may find this information in your owner's manual. If not, contact a local tire dealer. Note: You may not find this information on all tires because it is not required by law.

**M+S**  
The "M+S" or "M/S" indicates that the tire has some mud and snow capability. Most radial tires have these markings; hence, they have some mud and snow capability.

**U.S. DOT Tire Identification Number**  
This begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the US numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer's discretion. This information is used to contact consumers if a tire defect requires a recall.


**Tire Ply Composition and Materials Used**  
The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and other materials.

**Maximum Load Rating**  
This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

**Maximum Permissible Inflation Pressure**  
This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

3.4.10.3 - Information on Light Truck Tires

Please refer to the diagram below.

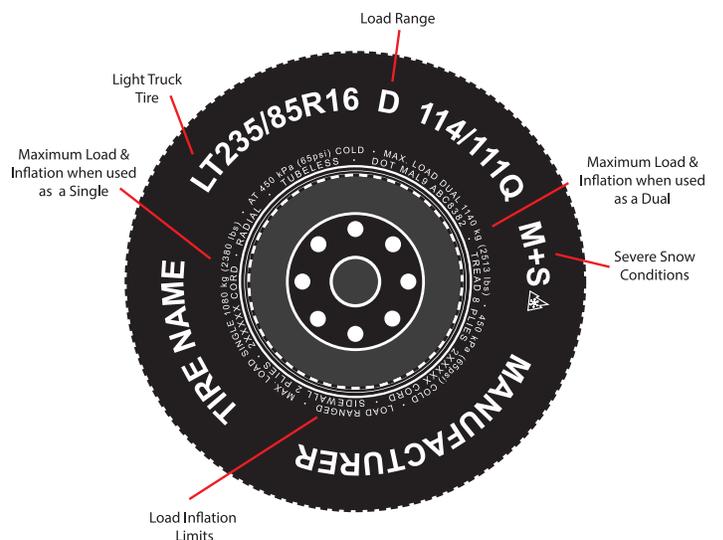

Tires for light trucks have other markings besides those found on the sidewalls of passenger tires.

**LT**  
The "LT" indicates the tire is for light trucks or trailers.

**Max. Load Dual kg (lbs) at kPa (psi) Cold**

This information indicates the maximum load and tire pressure when the tire is used as a dual, that is, when four tires are put on each rear axle (a total of six or more tires on the vehicle).

**Max. Load Single kg (lbs) at kPa (psi) Cold**


This information indicates the maximum load and tire pressure when the tire is used as a single.

**Load Range**

This information identifies the tire's load-carrying capabilities and its inflation limits.

3.4.10.4 - Information on Special Trailer Tires

Please refer to the diagram below.

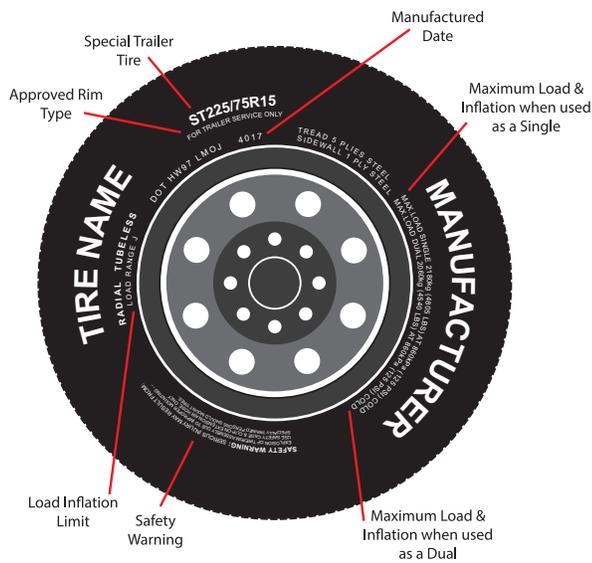

Tires specifically for trailers have other markings besides those found on the sidewalls of light truck and passenger tires.

**ST**

The "ST" indicates the tire is for trailer use **only**. "ST" tires are designed for carrying heavy loads and not for power driven axles or steering.

**3.4.11 TIRE SAFETY TIPS**

Preventing Tire damage

- Slow down if you have to go over a pothole or other object in the road.
- Do not run over curbs or other foreign objects in the roadway, and try not to strike the curb when parking or turning.

Tire Safety Checklist

- Check tire pressure regularly (at least once a month), including the spare.
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects, or other signs of wear or trauma.
- Remove bits of glass and foreign objects wedged in the tread.
- Make sure your tire valves have valve caps.
- Check tire pressure before going on a long trip.
- Do not overload your vehicle. Check the Tire Information and Loading Placard or User's Manual for the maximum recommended load for the vehicle.

## 4. COUPLING THE TOW VEHICLE

Follow all of the safety precautions and instructions in this manual to ensure safety of person, cargo and satisfactory life of the trailer.

### 4.1 USE AN ADEQUATE TOW VEHICLE AND HITCH

If the tow vehicle or hitch is not properly selected and matched to the Gross Vehicle Weight Rating (GVWR) of your trailer, you can cause an accident that could lead to death or serious injury. If you already have a tow vehicle, know your vehicle tow rating, and Gross Combination Weight Rating (GCWR) and make certain the trailer's rated capacity is less than or equal to the tow vehicle's rated towing capacity. If you already have (or plan to buy) a trailer, make certain that the tow rating of the tow vehicle is equal to or greater than the GVWR of the trailer, and that the GCWR will be within limits.



Fig.9 Bumper Pull Trailer VIN Certification Label



**DANGER**

**DANGER** - Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control, and may lead to death or serious injury.

Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

The VIN Certification Label contains the following critical safety information for the use of your trailer:

**MANUFACTURER:**

Elite Trailer Manufacturing, LLC.

**DATE OF MANUFACTURE:**

Month and Year the trailer was manufactured.

**GVWR:**

The Gross Vehicle Weight Rating is the maximum allowable gross weight of the trailer and its contents. The gross weight of the trailer includes the weight of the trailer and all of the items within it (such as cargo, water, food and other supplies).

**GAWR:**

The Gross Axle Weight Rating is the maximum gross weight that an axle can support. It is the lowest of axle, wheel or tire rating. Sometimes the tire or wheel rating is lower than the axle manufacturers rating, and will then determine GAWR.

The sum total of the GAWR for all trailer axles may be less than the GVWR for the trailer, because some of the trailer load is carried by the tow vehicle, rather than by the trailer axle(s). The total weight of the cargo and trailer must not exceed the GVWR, and the load on an axle must not exceed its GAWR.

**TIRE SIZE:**

The tire size recommended for your trailer and load range.

### 4.1.1 TRAILER INFORMATION



Fig.8 Gooseneck Trailer VIN Certification Label

**PSIC:**

The "pounds per square inch - cold" is the tire pressure (Kilopascals / Pounds per Square Inch) measured when cold.

**CERTIFICATION STATEMENT:**

"This vehicle conforms to all applicable U.S. Federal Motor Vehicle Safety Standards in effect on the date of manufacture shown above. This vehicle conforms to all applicable standards prescribed under the Canadian Motor Vehicle Safety Regulations in effect on the date of manufacture. - *Ce véhicule est conforme a toutes les normes qui lui sont applicables en vertu du reglement sur la securite des vehicules automobiles du Canada en vigueur a la date de sa fabrication.*"

**VIN:**

The 17 digit Vehicle Identification Number.

## 4.1.1.1 - Definitions

**Tow Vehicle**

When equipping a new vehicle or an older vehicle to tow your trailer, ask the vehicle dealer for advice on how to outfit the towing vehicle. Discuss the following information and equipment with the vehicle dealer.

**Overall Carrying and Towing Capacity of Vehicle**

Vehicle manufacturers will provide you with the maximum towing capacities of their various models, as well as the GCWR. No amount of reinforcement will give a 100 horsepower, 2,500 pound truck the towing capacity that a 300 horsepower, 5,000 pound truck has.

**Towing Hitch**

The towing hitch attached to your tow vehicle must have a capacity equal to or greater than the load rating of the trailer you intend to tow. The hitch capacity must also be matched to the tow vehicle capacity.

**Suspension System**

A tow vehicle equipped with a factory installed "Towing Package" likely comes equipped with heavy duty springs, heavy duty tires and other suspension components which are able to serve the size and weight of the trailer that the vehicle is rated to tow. However, the addition of additional equipment may further improve the tow vehicle performance. These may include adjustable air shocks, helper springs, etc.

**Brake Controller**

The brake controller is par of the tow vehicle and is essential in the operation of the electric brakes on the trailer. if you trailer has electric brakes it requires a brake controller be installed at the driver's position. The brake controller is not the same as the safety breakaway brake system that is installed on the trailer.

**Side View Mirrors**

The size of the trailer that is being towed and your state law regulations determine the size of the mirrors. However, some states prohibit extended mirrors on a tow vehicle, except while a trailer is actually being towed. In this situation, detachable extended mirrors are necessary. Check with your dealer or the appropriate state agency for mirror requirements.

**Heavy Duty Flasher**

A heavy duty flasher is an electrical component that may be required when your trailer turn signal lights are attached to the tow vehicle flasher circuit.

**Electrical Connector**

An electrical connector connects the light and brake systems on the trailer to the light and brake controls on the towing vehicle.

**Heavy Duty Engine Oil Cooling System**

The tow vehicle engine works harder when a trailer is being towed. Depending on the size of the trailer, you may need to install a separate engine oil cooler. Inadequate cooling may result in sudden engine failure. Ask the tow vehicle dealer if it is necessary to install a heavy duty cooling system.

**Automatic Transmission Oil Cooler**

The automatic transmission of a towing vehicle handles more power when a trailer is being towed. Inadequate cooling will shorten transmission life, and may result in sudden transmission failure. Ask the tow vehicle dealer if it is necessary to install a separate oil cooler for the automatic transmission.

**Fire Extinguisher**

It is sensible to have a fire extinguisher in the tow vehicle.

**Emergency Flares and Emergency Triangle Reflectors**

It is wise to carry these warning devices even if you are not towing a trailer. It is particularly important to have these when towing a trailer because the hazard flashers of your towing vehicle will not operate for as long a period of time when the battery is running both the trailer lights and tow vehicle lights.

**4.2 COUPLING AND UNCOUPLING THE TRAILER**

A secure coupling (or fastening) of the trailer to the tow vehicle is essential. A loss of coupling may result in death or serious injury. Therefore, you must understand and follow all of the instructions for coupling.

The following parts are involved in making a secure coupling between the trailer and tow vehicle:

**Coupler**

That part of the trailer connecting mechanism by which the connection is actually made to the trailer hitch. This does not include any structural member, extension of the trailer frame, or brake controller.

**Hitch**

That part of the connecting mechanism including the ball support platform and ball and those components that extend and are attached to the towing vehicle, including bumpers intended to serve as hitches.)

**Weight Distributing Hitch (or Equalizing Hitch)**

A mechanical device that connects the trailer to the towing vehicle and by means of leverage applied on both the trailer and towing vehicle structures, when properly adjusted, distributes the imposed vertical load at the hitch and coupling connection between structures of the towing vehicle and trailer.

**Weight Carrying Hitch**

A mechanical and/or structural device that connects the trailer to the towing vehicle and that does not employ features designed to redistribute the load imposed at the hitch and carrying connection.

**Safety Chains**

Chains permanently attached to the trailer such that if the coupler connection comes loose, the safety chains can keep the trailer attached to the tow vehicle. With properly rigged safety chains, it is possible to keep the tongue of the trailer from digging into the road pavement, even if the coupler-to-hitch connection comes apart.

**Trailer Lighting (and Braking) Connector**

A device that connects electrical power from the tow vehicle to the trailer. Electricity is used to turn on brake lights, running lights, and turn signals as required. In addition, if your trailer has a separate braking system, the electrical connector will also supply power to the trailer brakes from the tow vehicle.

**Breakaway Switch**

If the trailer becomes de-coupled from the towing vehicle, the breakaway switch lanyard, attached independently to the tow vehicle hitch, will pull a pin in the emergency electrical breakaway switch on the trailer. The breakaway switch is activated by a separate battery supply in the trailer such as to energize the trailer brakes independently of the towing vehicle. It is important to check the state of charge of the emergency breakaway battery before each trip. Simply pull the pin out of the switch by hand and then try to pull the trailer. If you feel a significant drag force the brakes are activated. Be sure to re-insert the pin in the break-away switch. Also be sure to allow enough slack in the break-away brake lanyard such

that the switch will only activate (pin pulls out) if the coupler connection comes loose.

For additional details refer to Section 4.2.2.5

**Jack**

A device on the trailer that is used to raise and lower the trailer tongue. On larger trailers the jack is sometimes called the "landing gear."

 **WARNING**

**WARNING** - An improperly coupled trailer can result in death or serious injury.

Do NOT move the trailer until:

- The coupler is secured and locked to hitch.
- The safety chains are secured to the tow vehicle.
- The trailer jack(s) are fully retracted.

Do NOT tow the trailer on the road until:

- Tires and wheels are checked.
- The trailer brakes are checked.
- The breakaway switch is connected to the tow vehicle.
- The load is secured to the trailer.
- The trailer lights are connected and checked.

**4.2.1 VARIOUS COUPLER DESIGNS**

Trailers are produced with a variety of coupler devices. One of the sections below will pertain to your trailer.

Bumper Pull (Ball-Hitch or Tag) Coupler

Gooseneck Hitch Coupler

Kingpin

If the coupler on your trailer does not resemble one of the couplers shown in the figures, see the separate coupler instructions. If you do not have separate coupler instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

**4.2.2 TRAILERS WITH BALL-HITCH COUPLER**

A ball-hitch coupler connects to a ball that is located on or under the rear bumper of your tow-vehicle. This system of coupling a trailer to a tow vehicle is sometimes referred to as a "bumper pull".

A ball-hitch trailer may be fitted with a tongue jack that can raise and lower the coupler. The tongue jack is mounted to the A-frame (front, or tongue) part of the trailer. By rotating the jack handle clockwise, the jack will extend and raise the tongue of the trailer.

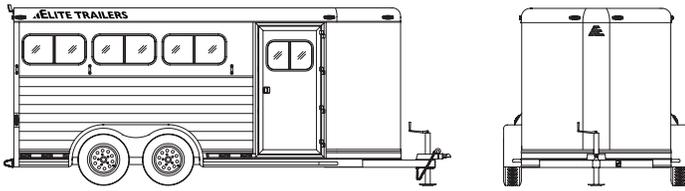


Fig.9 Trailer with Ball Hitch Coupler

Be sure the ball-hitch coupler is suitable for the size and weight of the trailer. The load rating of the coupler and the necessary ball size are listed on the trailer tongue. You must provide a hitch and ball for your tow vehicle, where the load rating of the hitch and ball is equal to or greater than that of your trailer. Also, the ball size must be the same as the coupler size. If the hitch ball is too small, too large, is underrated, is loose or is worn, the trailer can come loose from the tow vehicle, and may cause death or serious injury.

### **WARNING**

**WARNING** - The tow vehicle, hitch and ball must have a rated towing capacity equal to or greater than the trailer Gross Vehicle Weight Rating (GVWR).

It is essential that the hitch ball be of the same size as the coupler.

The ball size and load rating (capacity) are marked on the ball; hitch capacity is marked on the hitch.

#### 4.2.2.1 - Before Coupling the Trailer to the Tow Vehicle

- Be sure the size and rating of the tow vehicle hitch ball match the size and rating of the coupler on the trailer. Hitch balls and couplers are marked with their size and rating.

### **WARNING**

**WARNING** - Coupler-to-Hitch mismatch can result in uncoupling, leading to death or serious injury.

Be sure the **LOAD RATING** of the hitch ball is equal or greater than the load rating of the coupler.

Be sure the **SIZE** of the hitch ball matches the size of the coupler.

- Wipe the hitch ball clean and inspect it visually and by feel for flat spots, cracks and pits.

### **WARNING**

**WARNING** - A worn, cracked or corroded hitch ball can fail while towing, and may result in death or serious injury.

Before coupling trailer, inspect the hitch ball for wear, corrosion and cracks.

Replace worn or damaged hitch ball.

- Rock the ball to make sure it is tight to the hitch, and visually check that the hitch ball nut is solid against the lock washer and hitch frame.
- Wipe the inside and outside of the coupler clean and inspect it visually for cracks and deformations; feel the inside of the coupler for worn spots and pits.
- Be sure the coupler is tight to the tongue of the trailer. All coupler fasteners must be visibly solid against the trailer frame.

### **WARNING**

**WARNING** - A loose hitch ball nut can result in uncoupling, leading to death or serious injury.

Be sure the hitch ball is tight to the hitch before coupling the trailer.

Raise the bottom surface of the coupler to be above the top of the hitch ball. Use the jack if one is provided; otherwise, use wood or concrete blocks to support the trailer tongue.

#### 4.2.2.2 - Prepare the Coupler and Hitch

- Lubricate the hitch ball and the inside of the coupler with a thin layer of automotive bearing grease. If your trailer is equipped with a jack, raise the coupler above the ball height of the tow vehicle.
- Open the coupler locking mechanism. Ball couplers have a locking mechanism with an internal moving piece (ball clamp) and an outside handle, wheel, or latch.
- In the open position, the coupler is able to drop fully onto the hitch ball.
- See the coupler instructions for details of placing the coupler onto the hitch ball.
- See the coupler instructions for details of placing the coupler in the "open" position.
- Slowly back up the tow vehicle so that the hitch ball is near or aligned under the coupler.

#### 4.2.2.3 - Couple the Trailer to the Tow Vehicle

- Lower the trailer tongue until the coupler fully engages the hitch ball. If the coupler does not line up with the hitch ball, adjust the position of the tow vehicle.
- Engage the coupler locking mechanism. In the engage position, the locking mechanism securely holds the coupler to the hitch ball.
- Insert a pin or lock through the hole in the locking mechanism.
- Be sure the coupler is all the way on the hitch ball and locking mechanism is engaged. A properly engaged locking mechanism will allow the coupler to raise the rear of the tow vehicle. Using the trailer jack, test to see that you can raise the rear of the tow vehicle by 1 inch, after the coupler is locked to the hitch.

### NOTICE

**NOTICE** - Overloading can damage the tongue jack. Do not use the tongue jack to raise the tow vehicle more than 1 inch.

**If the coupler cannot be secured to the hitch ball, do not tow the trailer.**

Call Elite Trailer Manufacturing, LLC. at (405) 745-5757 or your dealer for assistance.

- Lower the trailer so that its entire tongue weight is held by the hitch, and continue retracting the jack to its fully retracted position.

#### 4.2.2.4 - Rig the Safety Chains

Visually inspect the safety chains and hooks for wear or damage. Replace worn or damaged safety chains and hooks before towing.



Fig.10 Safety Chain Arrangement

Rig the safety chains so that they:

- Criss-cross underneath the coupler so if the trailer uncouples, the safety chains can hold the tongue up above the road.
- Loop around a frame member of the tow vehicle or to holes provided in the hitch system (but, do **not** attach them to an interchangeable part of the hitch assembly).
- Attach "S" hooks up from underneath the hole (do not just drop into the hole).
- Provide enough slack to permit tight turns, but not so much slack as to drag the safety chains on the road surface.

### WARNING

**WARNING** - Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle.

- Fasten chains to frame of tow vehicle. Do not fasten chains to any part of the hitch unless the hitch has holes or loops specifically for that purpose.
- On Bumper Pull models cross chains underneath hitch and coupler with enough slack to permit turning and to hold tongue up, if the trailer comes loose.

#### 4.2.2.5 - Attach and Test Electric Breakaway Brake System

If the coupler or hitch fails, a properly connected and working breakaway brake system will apply electric brakes on the trailer. The safety chains will keep the tow vehicle attached and as the brakes are applied at the trailer's axle(s), the trailer/tow vehicle combination will come to a controlled stop.

The breakaway brake system includes a battery, a switch with a pullpin, and a lanyard. Read and follow the instructions here as well as the instructions that have been prepared by the breakaway brake system manufacturer. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

The breakaway brake system may be fitted with a "charging" capability that draws power from the tow vehicle. If the electrical system on your tow vehicle does not provide power to the breakaway brake battery, you must periodically charge the battery to keep the breakaway brake system in working order.



Fig.11 Breakaway Brake Cable Lanyard

- Connect the pullpin lanyard to the tow vehicle so that the pullpin will be pulled out before all of the slack in the safety chains is taken up. See Fig. 11. Do not connect the pullpin cable to a safety chain or to the hitch ball assembly. This would keep the breakaway brake system from operating when it is needed.
- To test the breakaway brake battery, remove the pullpin from the switch and attempt to pull the trailer forward. You should feel the trailer resisting being towed, but the wheels will not necessarily be locked. If the brakes do not function, do not tow the trailer until brakes, or battery are repaired.
- Immediately replace the pullpin. The breakaway brake system battery discharges rapidly when the pullpin is removed.

### WARNING

**WARNING** - An ineffective breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or ball hitch fails.

Connect the breakaway cable to the tow vehicle and NOT to the hitch, ball or support.

Before towing the trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do not tow the trailer. Have it serviced or repaired.

Do not tow the trailer with the breakaway brake system ON because the brakes will overheat which can result in permanent break failure.

### WARNING

**WARNING** - Failure to replace the pullpin will prevent brakes from working, leading to loss of control, serious injury or death.

If you do not use your trailer for three or more months, or during winter months:

- Store the battery indoors
- Charge the battery every three (3) months.

Replace the breakaway brake battery according to the intervals specified by battery manufacturer.

#### 4.2.2.6 - Connect the Electrical Cables

Connect the trailer lights to the tow vehicle's electrical system using the electrical connectors.

Check all lights for proper operation.

- Clearance and Running Lights (Turn on tow vehicle headlights).
- Brake Lights (Step on tow vehicle brake pedal).
- Turn Signals (Operate tow vehicle directional signal lever).

Check electric brakes for proper operation using brake controller mounted in the cab.

If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate. While towing the trailer at less than 5 mph (8 km/h), manually operate the electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

### WARNING

**WARNING** - Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes, and can lead to collision.

Before each tow:

- Check that the taillights, brake lights and turn signals work.
- Check that the electric brakes work by operating the brake controller inside the tow vehicle.

#### 4.2.2.7 - Uncoupling the Ball-Hitch Trailer with Tongue Jack

Follow these steps to uncouple your ball hitch trailer from the tow vehicle:

- Block trailer tires to prevent the trailer from rolling, before jacking the trailer up.
- Disconnect the electrical connector.
- Disconnect the breakaway brake switch lanyard.
- Disconnect the safety chains from the tow vehicle.

- Unlock the coupler and open it.
- Before extending jack, make certain the ground surface below the jack pad will support the tongue load.
- Rotate the jack handle (or crank) clockwise. This will slowly extend the jack and transfer the weight of the trailer tongue to the jack.

#### 4.2.3 TRAILERS WITH GOOSENECK COUPLER AND DROP-LEG JACK

A gooseneck coupler on the trailer connects to a gooseneck ball that you must have installed in the bed of the tow vehicle. This system of coupling a trailer to a tow vehicle permits the tow vehicle to turn to sharper angles than are permitted by a bumper hitch system. A gooseneck coupler consists of a tube in an inverted "U" shape and a gooseneck ball receiver. "Trailer with Gooseneck Hitch Coupler" figure shows a trailer with a gooseneck coupler. See Fig. 12

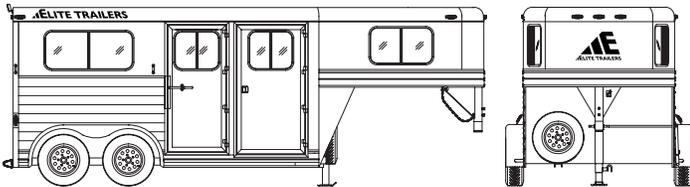


Fig.12 Trailer with Gooseneck Hitch Coupler

We have installed a gooseneck ball receiver that is suitable for the size and weight of the trailer. The load rating of the coupler and the necessary ball size are listed on the gooseneck.

You must provide a gooseneck ball and support structure that is marked with a rating that meets or exceeds the GVWR of your trailer **and** matches the size of the gooseneck ball receiver. If the gooseneck ball is too small, is underrated, is loose or is worn, the trailer can come loose from the tow vehicle, and may lead to death or serious injury.

#### **! WARNING**

**WARNING** - The tow vehicle, support structure and gooseneck ball must have a rated towing capacity equal to or greater than the trailer Gross Vehicle Weight Rating (GVWR).

It is essential that the gooseneck ball be of the same size as the gooseneck ball receiver.

The ball size and load rating (capacity) are marked on the ball; hitch capacity is marked on the hitch.

#### **! WARNING**

**WARNING** - Coupler-to-Hitch mismatch can result in uncoupling, leading to death or serious injury.

Be sure the LOAD RATING of the hitch ball is equal or greater than the load rating of the coupler.

Be sure the SIZE of the hitch ball matches the size of the coupler.

The height of the ball receiver on the trailer must be adjusted to match the height of the gooseneck ball on your tow vehicle, so that:

- There is clearance between the bottom of the trailer and the sides of the tow vehicle bed.
- The trailer is level and allows equal weight distribution on tandem axles.

The "Gooseneck Ball Receiver and Height Adjustment" figure shows the gooseneck height adjustment. See Fig. 13 The gooseneck height adjustment pin must be inserted through the coupler tube and linchpin connected. The adjustment bolt on the front tube makes a gripping impression into the gooseneck tube, must be tight so that the trailer does not drop to a lower position. Do not over-tighten because the tube can become deformed. After tightening the bolt, tighten the jam nut on the bolt.

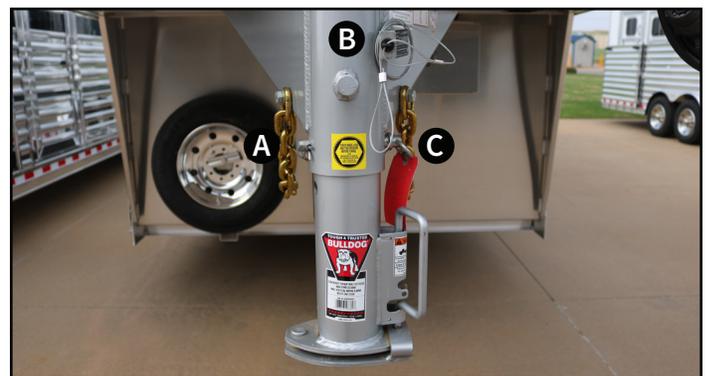


Fig.13 Gooseneck Ball Receiver and Height Adjustment

- A - Linchpin (Securing Pin (C) to Coupler Tube)
- B - Bolt (Secure Receiver Hitch to Coupler Tube for Leveling)
- C - Pin (Secure Receiver Hitch to Coupler Tube (Height Adjustment))

**! WARNING**

**WARNING** - Improper gooseneck height adjustment can result in overloaded tires, blowout and loss of control, leading to death or serious injury.

Adjust the gooseneck receiver so that the loaded trailer is level.



Fig.14 Drop-leg Jack Arrangement

A trailer having a gooseneck hitch will have one or two drop-leg jacks for raising and lowering the gooseneck ball receiver. Because several drop-leg jack mechanisms are available, the general instructions below may vary slightly from the jack manufacturer's instructions. If the trailer jack on your trailer does not resemble the jack shown in Fig. 14, follow the jack instructions provided by the jack manufacturer. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

#### 4.2.3.1 - Before Attempting to Tow the Trailer

- Be sure the size and rating of the gooseneck ball match the size and rating of the receiver. Gooseneck balls and receivers are marked with their size and ratings.
- Wipe the gooseneck ball clean and inspect it visually and by feel for flat spots, cracks and pits.

**! WARNING**

**WARNING** - A worn, cracked or corroded gooseneck ball can fail while towing, and may result in death or serious injury.

Before coupling the trailer, inspect the gooseneck ball for wear, corrosion and cracks; and replace worn or damaged gooseneck ball.

- Rock the ball to make sure it is tight to the ball support, and visually check that the gooseneck ball nut is solid against the lock washer and ball support frame.

**! WARNING**

**WARNING** - A loose gooseneck ball can result in uncoupling, leading to death or serious injury.

Be sure the gooseneck ball nut is tight before coupling the trailer.

- Wipe the inside and outside of the receiver clean and inspect it visually for cracks; and feel the inside of the receiver for worn spots and pits. If any of these conditions exist, have the receiver replaced before coupling the trailer.

#### 4.2.3.2 - Prepare the Ball Receiver and Gooseneck Ball

- Lubricate the inside of the gooseneck ball receiver with automotive bearing grease.
- Be sure the receiver is tight to the trailer. All receiver fasteners must be visibly solid against the trailer frame.
- If the tow vehicle is equipped with a tailgate, lower it.
- Release the jack handle or crank from its holder.
- Make certain the ground beneath the jack foot is firm enough to support the tongue weight.
- Rotate the handle/crank clockwise to raise the bottom surface of the gooseneck to be above the top of the gooseneck ball.
- Release the lock plate on the gooseneck ball receiver. With the spring-loaded lock plate locking pin in the OPEN position, rotate the lock plate to a position that allows the gooseneck ball to enter the receiver (See Fig. 13).
- Slowly back up the tow vehicle so that the gooseneck ball is aligned under the gooseneck ball receiver.

**! WARNING**

**WARNING** - If the trailer drops during coupling, death or serious injury may result.

There must be NO ONE under the trailer or coupler before or during the coupling operation.

#### 4.2.3.3 - Couple the Trailer to the Tow Vehicle

- Rotate the jack handle counter-clockwise. This will retract the jack causing the gooseneck ball receiver to drop down so it can fully engage the gooseneck ball and transfer the weight of the trailer tongue to the towing vehicle hitch. If the receiver does not line up with the ball, raise the receiver again and adjust the position of the tow vehicle. Then lower the receiver over the ball. When the drop-leg base is no longer resting on the ground, the towing vehicle

hitch is holding all of the weight of the trailer tongue.

- Close the lock plate on the gooseneck ball receiver.
- Move the spring-loaded lock plate locking pin to the CLOSED position. Be sure the locking pin is holding the lock plate.
- Be sure the receiver is all the way on the gooseneck ball and the lock plate is engaged. A properly engaged locking mechanism will allow the coupler to raise the rear of the tow vehicle. Using the trailer jack, test to see that you can raise the rear of the tow vehicle by 1 inch.

### NOTICE

**NOTICE** - Overloading can damage the drop-leg jack. Do not use the drop-leg jack to raise the tow vehicle more than 1 inch.

**If the gooseneck ball cannot be secured to the receiver, do not tow the trailer.**

Call Elite Trailer Manufacturing, LLC. at (405) 745-5757 or your dealer for assistance.

- After testing to see that the receiver is properly secured and locked to the ball, retract the jack to its fully retracted position.
- Return the drop-legs to their upper positions. The drop-legs are held in the lowered position with a plunger pin. Rotating the plunger pin while pulling it outward will cause it to come out of engagement with the drop-leg. See Fig. 15 below.



Fig.15 Drop-leg Mechanism

### CAUTION

**CAUTION** - Keep your feet, shins and hands well clear of the drop-legs and drop-leg bases when releasing the drop-legs. Always wear shoes or boots while performing this operation.

#### 4.2.3.4 - Rig the Safety Chains

- Visually inspect the safety chains and hooks for wear or damage. Replace worn or damaged safety chains and hooks before towing.
- Rig the safety chains so that they attach to the "safety chain receivers" in the bed of the tow vehicle. If you are not certain of the hitch provisions for receiving safety chains, contact the hitch manufacturer or installer. DO NOT attach the safety chains to the gooseneck ball or its support framework.
- Rig the safety chains so they have sufficient slack to permit turning, but not too much slack - the safety chains must keep the gooseneck on the tow vehicle bed if the trailer uncouples.



Fig.16 Safety Chain Arrangement

### WARNING

**WARNING** - Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle.

- Fasten chains to safety chain receivers on the hitch, not to the gooseneck ball.
- Have sufficient slack to permit turning and to keep gooseneck on bed of tow vehicle, if the trailer comes loose.

#### 4.2.3.5 - Attach and Test the Breakaway Brake System

If the coupler or hitch fails, a properly connected and working breakaway brake system will apply electric brakes on the trailer. The safety chains will keep the tow vehicle attached and as the brakes are applied at the trailer's axle(s), the trailer/tow vehicle combination will come to a controlled stop.

The breakaway brake system includes a battery, a switch with a pullpin, and a lanyard. Read and follow the instructions

here as well as the instructions that have been prepared by the breakaway brake system manufacturer. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

The breakaway brake system may be fitted with a "charging" capability that draws power from the tow vehicle. If the electrical system on your tow vehicle does not provide power to the breakaway brake battery, you must periodically charge the battery to keep the breakaway brake system in working order.



Fig.17 Breakaway Brake System

- Visually inspect the breakaway brake system for broken parts.
- Connect the pullpin lanyard to the tow vehicle so that the pullpin will be pulled out before all of the slack in the safety chains is taken up. Do not connect the pullpin cable to a safety chain, safety chain receiver, or to the gooseneck ball or its support. This would keep the breakaway brake system from operating when it is needed. Contact the hitch manufacturer or installer if you are not certain of the hitch provisions for the breakaway brake connection.
- To test the breakaway brake battery, remove the pullpin from the switch and attempt to pull the trailer forward. You should feel the trailer resisting being towed, but the wheels will not necessarily be locked. If the brakes do not function, do not tow the trailer until brakes, or battery are repaired.
- Immediately replace the pullpin. The breakaway brake system battery discharges rapidly when the pullpin is removed.

### ⚠ WARNING

**WARNING** - An ineffective breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or hitch fails.

Connect the breakaway cable to the tow vehicle and NOT to the safety chain, safety chain receiver, gooseneck ball or support.

Before towing the trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do not tow the trailer. Have it serviced or repaired.

Do **not** tow the trailer with the breakaway brake system ON because the brakes will overheat which can result in permanent brake failure.

### ⚠ WARNING

**WARNING** - Failure to replace the pullpin will prevent brakes from working, leading to loss of control, serious injury or death.

If you do not use your trailer for three or more months, or during winter months:

- Store the battery indoors
- Charge the battery every three (3) months.

Replace the breakaway brake battery according to the intervals specified by battery manufacturer.

#### 4.2.3.6 - Connect the Electrical Cables

Connect the trailer lights to the tow vehicle's electrical system using the electrical connectors.

Check all lights for proper operation.

- Clearance and Running Lights (Turn on tow vehicle headlights).
- Brake Lights (Step on tow vehicle brake pedal).
- Turn Signals (Operate tow vehicle directional signal lever).

Check electric brakes for proper operation using brake controller mounted in the cab.

If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in

order to confirm that the electric brakes operate. While towing the trailer at less than 5 mph (8 km/h), manually operate the electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

### WARNING

**WARNING** - Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes, and can lead to collision.

Before each tow:

- Check that the taillights, brake lights and turn signals work.
- Check that the electric brakes work by operating the brake controller inside the tow vehicle.

#### 4.2.3.7 - Uncoupling the Gooseneck Trailer with Drop-leg Jack

Follow these steps to uncouple your gooseneck hitch trailer from the tow vehicle:

- Block trailer tires to prevent the trailer from rolling, before jacking the trailer up.
- If the tow vehicle is equipped with a tailgate, lower it.
- Disconnect the electrical connector.
- Disconnect the breakaway brake switch lanyard.
- Disconnect the safety chains from the tow vehicle.
- Move the spring-loaded gooseneck receiver lock plate locking pin to the OPEN position.
- Rotate the lock plate to a position that permits the gooseneck ball to exit the receiver.
- Before releasing drop-leg jack, make certain the ground surface below the jack pad will support the trailer load.
- Rotate the drop-leg plunger pin handle so that the plunger pin is released from the drop-leg.
- Rotate the plunger pin handle so that the plunger pin is attempting to engage the drop-leg.

### CAUTION

**CAUTION** - Keep your feet, shins and hands well clear of the drop-legs and drop-leg bases when releasing the drop-legs.

Always wear shoes or boots while performing this operation.

- Be sure the plunger pin is fully engaged. Push it in by hand if necessary. The bent part of the plunger pin handle must be touching the plunger pin housing.
- If your trailer has two drop-leg jacks, lower them both to the same level, following the above instructions.

### NOTICE

**NOTICE** - If the drop-legs are not set at the same level, one of the drop-leg jacks can be overloaded and can be damaged.

- Release the handle (crank) from its holder and engage it with the jack shaft.
- Rotate the handle (crank) from its hold and engage it with the jack shaft.
- Rotate the handle clockwise to slowly extend the jack and transfer the weight of the trailer to the jack(s).
- On two speed jacks, pushing the handle shaft toward the gearbox can perform rapid extension. This shifts the gearbox into a high speed mode.
- When the drop-leg base contacts the ground, shift the gearbox into low gear mode by pulling or pushing on the handle shaft until it locks into low gear.

### NOTICE

**NOTICE** - Do not use high gear to lift the trailer; the drop-leg jack mechanism can be damaged.

High gear is used only to rapidly move the drop-leg base into contact with the ground.

- Continue to extend the jack(s), making sure that the ground is providing stable and level support for the trailer.
- After the jack(s) are extended and the gooseneck ball receiver is well clear of the gooseneck ball, to permit driving the tow vehicle away, disengage the handle from its shaft and return to its holder.

#### 4.2.4 TRAILERS WITH KINGPIN AND DROP-LEG JACK(S)

A fifth wheel coupler on the tow vehicle connects to a kingpin that is installed on a trailer.

A fifth wheel coupler includes a flat load-bearing plate with a slot, and a mechanism inside the slot that "grips" the kingpin.

We have installed a kingpin that is suitable for the size and weight of the trailer. You must provide a fifth wheel coupler which matches the kingpin, and is rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

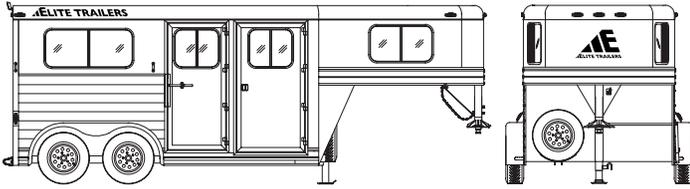


Fig.18 Trailer with Kingpin Coupler

#### 4.2.4.1 - Before attempting to Tow the Trailer

- Be sure the size and rating of the fifth wheel and kingpin match.
- Wipe the kingpin clean and inspect it visually and by feel for flat spots, cracks and pits. Check the condition of the fifth wheel coupler mounting on the rear of the tow vehicle.

### **WARNING**

**WARNING** - A worn, bent, cracked or corroded kingpin can fail while towing, and may result in death or serious injury.

Before coupling the trailer, inspect the kingpin and kingpin plate for wear, bending, cracks or corrosion; and replace worn or damaged kingpin.

- Be sure the fifth wheel mechanism operates freely.
- Lubricate the fifth wheel plate surface with a light coat of Lithium-base, waterproof grease.
- Be sure the fifth wheel and kingpin fasteners are tight and any welds are solid.

### **WARNING**

**WARNING** - A loose fifth wheel or kingpin can result in uncoupling, leading to death or serious injury.

Be sure the fifth wheel and kingpin are tight before coupling the trailer.

- Be sure the brake line, electrical line, and any other lines are clear of the coupling area.
- Be sure the locks are open.
- If the tow vehicle is equipped with a tailgate, lower it.
- Block the trailer wheels, front and rear.
- Make certain that trailer kingpin is slightly above the fifth wheel plate on the tow vehicle.

- Back tow vehicle up close to the trailer, centering the kingpin in the slot of the fifth wheel.
- **STOP** before engaging the coupling.

### **WARNING**

**WARNING** - If the trailer drops during coupling, death or serious injury may occur.

There must be NO ONE under the trailer or coupler before or during the coupling operation.

#### 4.2.4.2 - Couple the Trailer to the Tow Vehicle

- Adjust the height of the trailer, using the jack, so that the fifth wheel plate just touches the kingpin plate.
- Slowly back up the tow vehicle, keeping the kingpin centered in the slot of the fifth wheel. Continue backing up until the fifth wheel locks firmly on the kingpin.
- Visually check to confirm that the fifth wheel locks are properly locked onto the kingpin.

Attempt to pull forward as an initial test of the closing of the fifth wheel locks.

### **WARNING**

**WARNING** - An improperly coupled fifth wheel can come loose, resulting in death or serious injury.

Do not tow the trailer until all of the visual checks have been performed:

- Adjustment nut against fifth wheel.
  - Secondary lock behind yoke.
  - Fifth wheel against kingpin plate.
- Raise the Drop-leg Jack. A trailer having a kingpin will be outfitted with one or two drop-leg jacks for raising and lowering the kingpin. Because we use several drop-leg jack mechanisms, the general instructions below may vary slightly from the jack manufacturer's instructions. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.
  - Rotate the jack handle counter-clockwise. This will slowly retract the jack and transfer the weight of the trailer tongue to the towing vehicle. When the drop-leg base is no longer resting on the ground, the towing vehicle hitch is holding all of the weight of the trailer tongue. Continue retracting the jack to its fully retracted position.
  - Return the drop-legs to their upper positions. The drop-legs are held in the lowered position with a plunger pin. Rotating the plunger pin while pulling it outward about

3/4 inch will cause it to come out of the engagement with the drop-leg.

- Raise the tailgate.
- Pick up the trailer wheel blocks.

### CAUTION

**CAUTION** - Keep your feet, shins and hands well clear of the drop-legs and drop-leg bases when releasing the drop-legs.

Always wear shoes or boots while performing this operation.

#### 4.2.4.3 - Attach and Test the Breakaway Brake System

If the coupler fails, a properly connected and working breakaway brake system will apply electric brakes on the trailer.

The breakaway brake system includes a battery, a switch with a pullpin, and a lanyard. Read and follow the instructions here as well as the instructions that have been prepared by the breakaway brake system manufacturer. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

The breakaway brake system may be fitted with a "charging" capability that draws power from the tow vehicle. If the electrical system on your tow vehicle does not provide power to the breakaway brake battery, you must periodically charge the battery to keep the breakaway brake system in working order.

- Visually inspect the breakaway brake system for broken parts.
- Connect the pullpin lanyard to the tow vehicle so that the pullpin will be pulled out before all of the slack in the safety chains is taken up. See Fig. 17. Do not connect the pullpin cable to the kingpin or its support. This would keep the breakaway brake system from operating when it is needed. Contact the hitch manufacturer or installer if you are not certain of the hitch provisions for the breakaway brake connection.
- To test the breakaway brake battery, remove the pullpin from the switch and attempt to pull the trailer forward. You should feel the trailer resisting being towed, but the wheels will not necessarily be locked. If the brakes do not function, do not tow the trailer until brakes, or battery are repaired.
- Immediately replace the pullpin. The breakaway brake system battery discharges rapidly when the pullpin is removed.

### WARNING

**WARNING** - An ineffective breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or hitch fails.

Connect the breakaway cable to the tow vehicle and NOT to the kingpin or its support.

Before towing the trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do not tow the trailer. Have it serviced or repaired.

Do not tow the trailer with the breakaway brake system ON because the brakes will overheat which can result in permanent brake failure.

### WARNING

**WARNING** - Failure to replace the pullpin will prevent brakes from working, leading to loss of control, serious injury or death.

If you do not use your trailer for three or more months, or during winter months:

- Store the battery indoors
- Charge the battery every three (3) months.

Replace the breakaway brake battery according to the intervals specified by battery manufacturer.

#### 4.2.4.4 - Connect the Electrical Cables

Connect the trailer lights to the tow vehicle's electrical system using the electrical connectors.

Check all lights for proper operation.

- Clearance and Running Lights (Turn on tow vehicle headlights).
- Brake Lights (Step on tow vehicle brake pedal).
- Turn Signals (Operate tow vehicle directional signal lever).

Check electric brakes for proper operation using brake controller mounted in the cab.

If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate. While towing the trailer at less than 5 mph (8 km/h), manually operate the

electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

### WARNING

**WARNING** - Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes, and can lead to collision.

Before each tow:

- Check that the taillights, brake lights and turn signals work.
- Check that the electric brakes work by operating the brake controller inside the tow vehicle.

#### 4.2.4.5 - Uncoupling the Kingpin Trailer with Drop-Leg Jack(s)

Follow these steps to uncouple your fifth wheel hitch trailer from your tow vehicle:

- Block trailer wheels to prevent the trailer from rolling before jacking the trailer up.
- If the tow vehicle is equipped with a tailgate, lower it.
- Disconnect the electrical connector.
- Disconnect the breakaway brake switch lanyard.
- Make certain that the ground surface below the jack base will support trailer tongue load.
- Rotate the drop-leg plunger pin handle so that the plunger pin is released from the drop-leg.

### CAUTION

**CAUTION** - Keep your feet, shins and hands well clear of the drop-legs and drop-leg bases when releasing the drop-legs.

Always wear shoes or boots while performing this operation.

- Rotate the plunger pin handle so that the plunger pin is attempting to engage the drop-leg.
- Be sure the plunger pin is fully engaged. Push it in by hand if necessary. The bent part of the plunger pin handle must be touching the plunger pin housing.
- If your trailer has two drop-leg jacks, lower them both to the same level, following the above instructions.

### NOTICE

**NOTICE** - If the drop-legs are not set at the same level, one of the drop-leg jacks can be overloaded and can be damaged.

- Release the hand (crank) from its holder and engage it with the jack shaft.
- Rotate the handle (crank) clockwise to slowly extend the jack and transfer the weight of the trailer tongue to the jack.
- On two speed jacks, pushing the handle shaft toward the gearbox can perform rapid extension. This shifts the gearbox into a high speed mode.
- When the drop-leg base contacts the ground, shift the gearbox into low speed mode by pulling out on the handle shaft until it locks into low gear.

### NOTICE

**NOTICE** - Do not use high gear to lift the trailer; the drop-leg jack mechanism can be damaged.

High gear is used only to rapidly move the drop-leg base into contact with the ground.

- Continue to extend the jack(s), making sure that the ground is providing stable and level support for the trailer.
- Turn the crank two or three turns to take some of the weight of the coupling. Do **not** raise the kingpin off the fifth wheel plate.
- After the jack(s) are extended enough to permit driving the tow vehicle away, disengage the jack handle from its shaft and return it to its holder. Do **NOT** drive the tow vehicle yet!
- Open the fifth wheel locks.
- Slowly drive the tow vehicle away from the trailer.
- Raise the tow vehicle tailgate if so equipped.

# 5. LOADING THE TRAILER

Improper trailer loading causes many accidents and deaths.

To safely load a trailer, you must consider:

- Overall load weight.
- Load weight distribution.
- Proper tongue weight.
- Securing the load properly.

To determine that you have loaded the trailer within its rating, you must consider the distribution of weight, as well as the total weight of the trailer and its contents. The trailer axles carry most of the total weight of the trailer and its contents (Gross Vehicle Weight, or “GVW”). The remainder of the total weight is carried by the tow vehicle hitch. It is essential for safe towing that the trailer-tongue and tow vehicle hitch carry the proper amount of the loaded trailer weight, otherwise the trailer can develop an undesirable sway at towing speeds, or the rear of the towing vehicle can be overloaded. Read the “Tongue Weight” section next.

The load distribution must be such that no component part of the trailer is loaded beyond its rating. This means that you must consider the rating of the tires, wheels and axles. For tandem and triple axle trailers, you must make sure that the front-to-rear load distribution does not result in overloading any axle.

Towing stability also depends on keeping the center of gravity as low as possible. Load heavy items on the floor and over the axles. When loading additional items, be sure to maintain even side-to-side weight distribution and proper tongue weight. The total weight of the trailer and its contents must never exceed the total weight rating of the trailer (Gross Vehicle Weight Rating, or “GVWR”).

**WARNING**

**WARNING** - An overloaded trailer can result in loss of control of the trailer leading to death or serious injury.

Do not exceed the trailer Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR).

Do not load a trailer so that the weight of any tire exceeds its rating.

## 5.1 TONGUE WEIGHT

It is critical to have a portion of the trailer load carried by the tow vehicle. That is, the trailer tongue must exert a downward force on the hitch. This is necessary for two reasons. First, the proper amount of tongue weight is necessary for the tow vehicle to be able to maintain control of the tow vehicle/trailer system. If, for example, the tongue exerts an upward pull on the hitch, instead of pushing down on it (because the trailer is overloaded behind its axle(s)), the rear wheel of the tow vehicle can lose traction or grip and cause loss of control. Also, even if there is some weight on the tongue, but not enough weight on the tongue, the trailer can become unstable at high speeds. Remember, the faster you go the more likely the trailer is to sway.

If, on the other hand, there is too much tongue weight, the tow vehicle is prone to jack-knife. Furthermore, the front wheels of the tow vehicle can be too lightly loaded and cause loss of steering control and traction, if the front wheels are driving.

In addition to tow vehicle control, tongue weight is necessary to insure that the trailer axle(s) do not exceed their Gross Axle Weight Rating (GAWR).

The table below has “rules of thumb” for proper tongue weight.

In the table below, the second column notes the rule of thumb percentage of total weight of the trailer plus its cargo (Gross Vehicle Weight, or “GVW”) that should appear on the tongue of the trailer. For example, a trailer with a gooseneck hitch, with a loaded weight of 12,000 pounds / 5,443.11 kilograms, should have 20-25% (of 12,000 pounds / 5,443.11 kilograms) on the tongue. That is, the example trailer would have 2,400 to 3,000 pounds (1,088.62 to 1,360.77 kilograms) on its tongue.

Tongue Weight as a Percentage of Loaded Trailer Weight	
Type of Hitch	Percentage (%)
Ball Hitch (Bumper Pull) Small Trailer	6 - 10 %
Ball Hitch (Bumper Pull) Large Trailer	10 - 15 %
Gooseneck and Fifth Wheel Hitch	20 - 25 %

The numbers quoted above are for example purposes only and should be tailored to the specific trailer. For questions regarding the actual percent of tongue weight for your specific trailer, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

**⚠ WARNING**

**WARNING** - Improper tongue weight (load distribution) can result in loss of control of the trailer, leading to death or serious injury.

Make certain that tongue weight is within the allowable range.

Be sure to:

- Distribute the load front-to-rear to provide proper tongue weight (See Chart).
- Distribute the load evenly, right and left, to avoid tire overload.
- Keep the center of gravity low.

**5.1.1 CHECKING TONGUE WEIGHT**

To check the tongue weight, the tow vehicle and trailer must be on level ground, as they will be when the trailer is being towed.

For lighter trailers, the recommended method of checking tongue weight is to use an accessory called a "tongue weight scale." if a tongue weight scale is not available from your dealer, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for assistance.

**5.2 SECURING THE CARGO**

Since the trailer "ride" can be bumpy and rough, you must secure your cargo so that it does not shift while the trailer is being towed.

**⚠ WARNING**

**WARNING** - Shifting cargo can result in loss of control of the trailer, and can lead to death or serious injury.

Tie down all loads with proper sized fasteners, ropes, straps, etc.

**5.2.1 LOADING CARGO (ENCLOSED TRAILER)**

Couple the trailer to the tow vehicle before loading. The tongue of a bumper pull trailer can rise during loading, before the cargo is properly distributed. To measure the tongue weight, you will have to uncouple the trailer after it is loaded.

Do not transport people, containers or hazardous substances, cans or containers of flammable substances. However, fuel in the tank of an off-road vehicle, or a car or motorcycle, etc., may be carried inside of your enclosed cargo trailer.

**⚠ WARNING**

**WARNING** - Do not transport people inside the trailer, even if it has living quarters. The transport of people puts their lives at risk and may be illegal.

**⚠ WARNING**

**WARNING** - Do not transport flammable, explosive, poisonous or other dangerous materials in your trailer.

**5.2.1.1 - Preparing the Trailer for Loading**

Before loading cargo into your enclosed trailer, inspect the interior of the trailer.

Enclosed trailers may be fitted with "D"-ring hold-downs, and/or a track system that can be used to secure the cargo. Inspect the "D"-rings and track system for looseness or signs of bending before loading the cargo onto the trailer.

**⚠ WARNING**

**WARNING** - Damaged or loose "D"-rings can break, allowing cargo to become loose inside the trailer. Loose cargo can shift the center of gravity, and result in loss of control of the trailer.

Inspect "D"-rings, and test them for looseness before loading cargo.

Do not use a damaged or loose "D"-ring to secure cargo.

**5.2.1.2 - Loading the Enclosed Trailer**

Enclosed trailers may be fitted with a drop ramp door. The weight of the drop ramp door is partially held by a spring and cable counterbalance assembly. If the spring and cable counterbalance assembly is out of adjustment or worn out, it will not provide the expected assistance for slow and careful lowering and raising of the ramp.

**⚠ WARNING**

**WARNING** - A spring and cable counterbalance can inflict serious injury if it breaks, or if incorrectly adjusted.

Inspect the cable and cable ends each time the door is operated.

Do not attempt to service the counterbalance. Take the trailer to your dealer for service.

Slowly lower the ramp.

Load the cargo up the drop ramp and into the trailer, with approximately 60% of the cargo in the front half of the trailer.

**! WARNING**

**WARNING** - Accumulation of hazardous fumes can cause death or serious injury.

Secure the cargo to the trailer using appropriate straps, chains and tensioning devices.

Close the ramp door and secure the trailer door catch using a linchpin or other locking device, so that the catch and door cannot open while the trailer is being towed.

**! WARNING**

**WARNING** - If the door opens, your cargo may be ejected onto the road, resulting in death or serious injury to other drivers.

Always secure the door latch after closing.

**5.2.2 LOADING HORSES (HORSE TRAILER)**

Couple the trailer to the tow vehicle before loading. This is essential for the bumper pull trailer because the tongue of a bumper pull trailer can rise during loading, before the cargo is properly distributed.

The cargo-carrying portion of a horse trailer is designed only for carrying horses. Do not transport people, livestock, containers or hazardous substances, or containers of flammable substances.

**! WARNING**

**WARNING** - Do not transport people inside the trailer, even if it has living quarters. The transport of people puts their lives at risk and may be illegal.

**! WARNING**

**WARNING** - Do not carry "loose" livestock in your horse trailer. They can cause the trailer to become unstable and can result in loss of control.

You must use a trailer designed to carry "loose" livestock.

Before loading a horse in your trailer, inspect the interior of the trailer. The interior of the trailer must be smooth, and have no protruding objects. There should be no loose objects that could move about and startle or injure the horse. Check the walls, floor, dividers, etc., for loose and broken parts, welds, hinges, etc.

**5.2.2.1 - Preparing the Horse Trailer for Loading**

Open windows and vents to provide ventilation. Consider the weather and transport conditions. (i.e. on warm sunny days, maximum ventilation is required). Do not carry a horse without providing ventilation, even in coldest weather. Ventilation is critical for the well being of your horses. Know your horses and adjust ventilation for your horses' comfort.

Tighten any loose or protruding screws in the walls.

Remove or secure loose objects, (i.e. butt bars, saddles, tack and equipment) so that items will not move during towing.

Inspect for cracks at the welds on the divider hinges, and the welds on the tie rings. If you are able to open any cracks in or near these welds by lifting the dividers or by twisting the tie rings, have the weld repaired before loading your horses.

**! CAUTION**

**CAUTION** - The trailer interior may contain hazards to a horse that can result in serious injury or death to the horse.

Before loading a horse, inspect the trailer interior and adjust or repair all loose and protruding features such as handles, loose or broken parts of the trailer, etc.

Before towing trailer:  
 Lock all stall dividers.  
 Be sure all saddles, tack and equipment, as well as horse(s), are prevented from being thrown about.

**! WARNING**

**WARNING** - Improper weld repair will lead to early failure of the trailer structure and can cause serious injury or death.

Do not repair cracked or broken welds unless you have the skills and equipment to make a proper repair. Have the welds repaired by your dealer.

*5.2.2.2 - Loading the Horse Trailer*

The trailering of horses introduces many variables that are not present in the trailering of non-living cargo. Horses are prone to take flight when they feel threatened or pain. In the confines of a trailer, the flight response can cause serious injury or death to a human handler. Even experienced and docile horses can be frightened.

Horses must be slowly acclimated to trailering. Be sure the horse's first trip are short trips, so you can gauge its reaction.

Some will take to the experience easily, but others will strongly protest. You must act according to your horse's demeanor.

**! WARNING**

**WARNING** - When a horse is frightened, it is capable of inflicting serious injury or death to a human handler.

Know your horse's temperament before attempting to trailer it.

Handling a horse that is not trailer-acclimated may result in injury or death, or damage to your trailer.

Do not haul an unbroken horse in this trailer.

All horses must have a halter.

Open all stall dividers and lock them in their OPEN (against the wall) position.

If the trailer has living quarters, close and lock the door between the living quarters and the horse area.

If the trailer is fitted with a drop ramp, carefully lower it to the ground.

If your trailer is fitted with swinging loading doors, open them fully and fasten them open using the door holdbacks.

Lead the horse into the trailer by a halter or lead rope. If the horse shows any sign of distress, stop loading, and calm the horse.

**! WARNING**

**WARNING** - Improper weight distribution of the horses in the trailer will result in an unstable trailer.

Always load the first horse into the forward-most stall near the tow vehicle.

Tie the horse to the trailer interior by fastening the quick connect or tying the lead rope to the tie ring, or other facility provided on the trailer wall for attachment of the lead rope. A rule of thumb is to leave about 18 inches of free rope between the attachment point on the trailer and the horse. The layout of the horse trailer has been designed to safely contain your horse. The trailer is equipped with stall dividers and tie rings to secure the horse, and has a rubber floor mat to keep shod horses from slipping on the metal underfloor. Restraining a horse without using a combination of a tie-strap and stall divider may result in serious injury or death to the horse.

**! CAUTION**

**CAUTION** - Failure to secure a horse using a tie strap may result in serious injury or death to the horse.

Close and lock the stall divider.

If additional horses are to be loaded, repeat steps above for each horse - lead the horse, secure the horse, close and lock stall dividers. After the last horse has been loaded, lock any unused dividers in the CLOSED (across the trailer) position.

Double check that each horse is tied to the trailer and each stall divider is LOCKED in the CLOSED position.

If your trailer is fitted with a butt bar or butt strap to keep the horse away from the door, hook and lock the butt bar in place.

Close the trailer. Remove the door holdback and swing the hinged doors to a closed position, or raise the drop ramp if applicable.

Secure the trailer door catch, so that the catch and door cannot open while the trailer is being towed.

If your trailer is fitted with feed doors, close and secure them.

**! WARNING**

**WARNING** - If the door opens, your cargo may be ejected onto the roadway, resulting in serious injury or death to other drivers.

Always secure the door latch after closing.

Check the horse(s) after 5 to 10 miles (8 to 16 kilometers) or 10 minutes of towing, and then at least once per hour thereafter. Open a feed door or other access and look for signs of stress, cuts, or injury. On long trips it is recommended that horses be removed from the trailer every 6-10 hours for exercise, food and watering.

### WARNING

**WARNING** - Horses may kick when back door is opened.  
Stay clear when opening back door.

#### 5.2.3 LOADING LIVESTOCK (LIVESTOCK TRAILER)

Couple the trailer to the tow vehicle before loading. This is essential for the bumper pull trailer because the tongue of a bumper pull trailer can rise during loading, before the cargo is properly distributed.

The cargo-carrying portion of a livestock trailer is for carrying livestock (other than horses) only. The livestock trailer does not have the equipment required for the safe transport of horses, e.g. stall dividers, tie rings and a rubber floor mat. Do not transport people, containers or hazardous substances, or containers of flammable substances.

### WARNING

**WARNING** - Do not transport people inside the trailer, even if it has living quarters. The transport of people puts their lives at risk and may be illegal.

### WARNING

**WARNING** - Do not transport flammable, explosive, poisonous or other dangerous materials in your trailer.

### CAUTION

**CAUTION** - Hauling a horse in a livestock trailer may result in serious injury or death to the horse.

Do not carry a horse in a livestock trailer. Use a trailer designed to haul horses.

##### 5.2.3.1 - Preparing the Livestock Trailer for Loading

Before loading livestock in your trailer, inspect the interior of the trailer. The interior of the trailer must be smooth, and have

no protruding objects. There should be no loose objects that could move about and startle or injure your livestock. Check the walls, floor, etc., for loose and broken parts, welds, hinges, etc. Tighten any loose or protruding bolts in the walls.

### CAUTION

**CAUTION** - The interior space of a trailer may contain hazards that result in serious injury or death to trailered livestock.

Inspect the interior of the trailer before loading livestock.

- Adjust or repair all loose and protruding features.
- All cargo and equipment, besides the livestock, must be prevented from being thrown about before towing your trailer.

##### 5.2.3.2 - Loading the Livestock Trailer

The trailering of livestock introduces many variables that are not present in the trailering of non-living cargo. Livestock may resist being loaded into a trailer.

### WARNING

**WARNING** - Large animals are capable of inflicting serious injury or death to a human handler.

Know your animals' temperament before attempting to trailer them.

If the trailer is fitted with a drop ramp, carefully lower it to the ground.

With the trailer in position, open and secure the loading door (either swinging or roll-up).

Open and secure the interior gates as necessary.

Guide the livestock into the trailer.

Gate the livestock tightly to keep them from moving or falling during transportation.

Close the loading doors and raise the drop ramp.

Secure the trailer door catch with a linchpin or similar device, so that the catch and door cannot open while the trailer is being towed.

## 6. CHECKING THE TRAILER BEFORE AND DURING EACH TOW

### 6.1 PRE-TOW CHECKLIST

Before towing, double-check all of these items: See Section 9.1, "inspection, Service & Maintenance Summary Charts," for more information.

- Tires, wheels and lug nuts  
(See the "Major Hazards" section starting on page 3 of this manual.)
- Tire Pressure. Inflate tires on trailer and tow vehicle to the pressure stated on the VIN Certification Label or Tire Placard.
- Coupler secured and locked (See the "Coupling to the Tow Vehicle" chapter starting on page 19 of this manual.)
- Safety chains properly rigged to tow vehicle, not to hitch or ball (See the "Coupling to the Tow Vehicle" chapter starting on page 19 of this manual.)
- Test of lights: Tail Lights, Stop Lights, and Turn Lights.
- Test Trailer Brakes.
- Safety breakaway switch lanyard fastened to tow vehicle, not to safety chains (See the "Coupling to the Tow Vehicle" chapter starting on page 19 of this manual.)
- Cargo properly loaded, balanced and tied down (See the "Loading the Enclosed Trailer" section starting at page 34 of this manual.)
- Tongue weight and weight distribution set-up.
- Doors and gates latched and secured.
- Fire Extinguisher.
- Flares and Reflectors.

After each 50 miles (80 kilometers), or one hour of towing, stop and check the following items:

- Coupler Secured
- Safety Chains are fastened and not dragging
- Cargo Secured
- Cargo Door Latched and Secured

### 6.2 MAKE REGULAR STOPS

## 7. BREAKING-IN A NEW TRAILER

### 7.1 RETIGHTEN LUG NUTS AT FIRST 10, 25 & 50 MILES (16, 40 & 80 KILOMETERS)

Wheel lugs can shift and settle quickly after being first assembled, and must be checked after the **first** 10, 25 and 50 miles (16, 40, and 80 kilometers) of driving. Failure to perform this check may result in a wheel coming loose from the trailer, causing a crash leading to serious injury or death.

#### WARNING

**WARNING** - Lug nuts are prone to loosen after initial installation, which can lead to serious injury or death.

Check lug nuts for tightness on a new trailer or when wheel(s) have been remounted after the **first** 10, 25 and 50 miles (16, 40 and 80 kilometers) of driving.

See section 9.2.13.2 (Page 50) on "Proper Torquing Technique".

### 7.2 ADJUST BRAKE SHOES AT FIRST 200 MILES (322 KILOMETERS)

Brake shoes and drums experience a rapid initial wear. The brakes must be adjusted after the first 200 miles (322 kilometers) of use, and each 3,000 miles (4828 kilometers) thereafter. Some axles are fitted with a mechanism that will automatically adjust the brake shoes when the trailer is "hard braked" from a rearward direction. Read your axle and brake manual to see if your brakes adjust automatically. If you do not have the axle and brake manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

A "hard brake" stop is used to:

- Confirm that the brakes work.
- Confirm that the trailer brakes are properly synchronized with the tow vehicle brakes using the brake controller in the tow vehicle.
- Adjust the brake shoes as necessary.

If your trailer is not fitted with automatically adjusting brakes, the brakes will need to be manually adjusted. See section 9.2.5.2, "Manually Adjusting Brake Shoes," for instructions.

### 7.3 SYNCHRONIZING THE BRAKE SYSTEMS

Trailer brakes are designed to work in synchronization with the brakes on the tow vehicle. When the tow vehicle and trailer braking systems are synchronized, both braking systems contribute to slowing, and the tongue of the trailer will neither dive nor rise sharply.

#### WARNING

**WARNING** - If trailer and tow vehicle brakes do not work properly together, serious injury or death can occur.

Road test the brakes in a safe area at no more than 30 mph (48 km/h) before each tow.

To insure safe brake performance and synchronization, read and follow the axle/brake and the brake controller manufacturers' instructions. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

### 7.4 TIRE PRESSURE

Check tire pressure on both the trailer and the tow vehicle. Inflate to the maximum COLD psi shown on the VIN Certification Label or Tire Placard.

## 8. ACCESSORIES

This chapter provides some basic information for the safe operation of several accessories. For many accessories, such as generators and LP appliances, the manufacturer of the accessory has also provided instructions. You must read and follow these instructions before using the accessory. If you are uncertain whether you have all of the instructions, call Elite Trailer Manufacturing, LLC at (405) 745-5757 before operating the accessory. The following accessories are described in this section:

- Gasoline (or LP) and Diesel Generators
- Accessory Battery
- "Shore Power" connections which provide power by "plugging the trailer in" to an external source of electrical power
- LP Gas Fuel System
- Vending or Accessory Doors
- Electric-powered Landing Gear

Many accessories introduce the risk of fire and carbon monoxide poisoning. If you have an accessory on your trailer, make sure you have a fire extinguisher charged and ready before operating the accessory. Check the fire extinguisher at least once a month. If the fire extinguisher is discharged even partially, it must be recharged. Follow the fire extinguisher manufacturer's instructions for recharging the extinguisher after use.

### 8.1 GASOLINE-POWERED ELECTRIC GENERATORS

If your trailer is equipped with a generator, you must have and follow the generator manufacturer's instructions. Carbon monoxide gas is present in the exhaust of all gasoline and diesel engines, as well as from other burning fuels such as LP gas and charcoal.

Carbon monoxide is an odorless gas that can cause death. Be certain exhaust from any running engine or burning fuels can not accumulate in areas where people or animals are likely to be present. Conditions that can redirect exhaust fumes are, for example:

- Being drawn in by fans or ventilators operated in a trailer.
- Prevailing wind.
- Being trapped between adjacent trailers, vehicles or buildings.
- Being trapped between or in a snow bank or other materials than can redirect fumes.

### WARNING

**WARNING** - Operating gasoline and diesel generators can lead to serious injury or death by:

- Carbon Monoxide
- Fire and Explosion
- Electrocutation

Have a working carbon monoxide detector in the accommodation spaces before operating a generator.

Do not refuel a running generator or refuel near ignition sources.

### WARNING

**WARNING** - Do not operate portable heaters or generators inside an enclosed trailer without adequate ventilation as serious injury or death may occur.

Before starting the generator, check fuels and oil levels. The generator may have to run for two or three minutes before it allows drawing electricity from it. Read the generator instruction manual. If you do not have the generator instruction manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

Never exceed the capacity of the generator.

Before turning off the generator, remove the electrical load and let the engine to run for two or three minutes to cool the generator.

### 8.2 ACCESSORY BATTERY

Your trailer may be outfitted with an accessory battery that operates lighting, electric landing gear, dump body, slide-outs or other accessories. An accessory battery may be kept charged either by the tow vehicle or by the generator or shore power.

A disconnect switch may be provided to disconnect the accessory battery when you do not plan to be using the trailer for an extended period, such as seasonal storage. If there is no disconnect switch, then remove the cables from the battery terminals.

The accessory battery must be kept in a charged condition during storage. The battery could freeze and break if it becomes discharged.

### 8.3 SHORE POWER

Shore power is the delivery of electrical power from another source to a power inlet on your trailer. To connect your trailer to this source, you must have a “shore power” cord, specifically designed for this use. **DO NOT USE AN ORDINARY EXTENSION CORD.** The trailer end of this cord is connected to an electrical box on the trailer, sometimes referred to as a “motor base.” This box contains circuit breakers and/or fuses and may include a power converter to change the shore power (usually 110 volts alternating current) into 12 volts direct current.

Do not assume that a shore power supply is correctly wired. Shore power may have incorrect polarity or not have the safety ground. Before connecting your trailer, you should test shore power by using a polarity and ground tester, which can be purchased at electronic stores.

If you have shore power, your trailer may be fitted with Ground-Fault Interrupting outlets (GFI). If you have GFI protection, you must periodically test the outlets by pressing the “TEST” button that is located on the GFI-equipped outlet.

#### DANGER

**DANGER** - Shore power poses a risk of death due to electrocution or fire.

- Always use an electrical cord specifically designed for shore power connection. Never use an ordinary extension cord.
- Always connect the electrical cord to a grounded source of shore power.
- Do not remove the "third prong" from the shore power plug.
- Connect only to source of proper voltage.
- Make certain polarity is correct.
- Do not overload electrical circuits.
- Always replace fuses or circuit breakers with correct rating.

### 8.4 LP GAS FUEL SYSTEM

LP gas systems are installed to operate a variety of appliances, such as stoves, refrigerators, heating units and electrical generators. The exhaust fumes from burning LP gas contain carbon monoxide. Carbon monoxide gas is odorless and can cause death or serious brain injury if inhaled. The exhaust from LP appliances must be directed to the outdoors. You must have an operating carbon monoxide detector in the living quarters of your trailer.

#### WARNING

**WARNING** - You can die or suffer brain damage by Carbon Monoxide.

Make certain the exhaust from LP appliances is directed to the outdoors.

Have a working carbon monoxide detector in the accommodation spaces of your trailer before operating any LP gas appliance.

Do not operate portable grills or stoves inside the trailer.

When used for the first time, or after a period of storage, the LP gas lines will be full of air and must be purged of air, before the appliances will stay lit. Have the LP gas lines purged by your trailer dealer, or an LP gas dealer.

An LP gas system is designed to operate with a supply of LP gas only, NOT natural gas. A natural gas supply is unsafe for the system's pressure regulation devices.

#### DANGER

**DANGER** - Risk of death due to fire or explosion.

Only connect an LP gas system to a supply of LP gas, NOT natural gas.

Do not store LP gas tanks inside the trailer.

Only fill an LP gas tank 80% full.

Only fill the tank with LP gas (butane or propane).

Overfilled tanks can release gas and cause an explosion.

Keep the shutoff valve on your LP gas tank closed at all times, except when you are operating an LP gas appliance. Before opening the LP shutoff valve, turn off all LP gas appliances. If an appliance is on when you open the shutoff valve, LP gas will accumulate in the trailer, which can result in an explosion.

Do not use a wrench to open or close the shutoff valve. If the shutoff does not completely stop the flow of LP gas when it is hand-tightened, replace the shutoff valve.

LP gas leaks can result in fire or explosion. If your trailer is equipped with an LP gas system, it must also be equipped with an LP gas detector. The LP gas detector will be located near the floor to detect the heavier-than-air LP gas. If a leak is

suspected, use a soapy water solution to search for the leak. Do not use a solution that contains ammonia or chlorine (common in window and other household cleaning compounds), because those chemicals will cause LP piping corrosion.

### WARNING

**WARNING** - Risk of fire or explosion.

If LP gas is detected (by smell or by the LP gas detector):

- Do not touch electrical switches.
- Extinguish flames and pilot lights.
- Open doors for ventilation.
- Shut off LP gas supply at the LP tank.
- Leave the area until odor clears.

Correct the source of LP gas leakage before using LP appliances.

Do not use a flame to locate the source of an LP gas leak.

LP gas is either propane or butane that is compressed into liquid form. LP gas must be completely vaporized before being burned. Butane gas will not operate if the outside temperature is below 32° Fahrenheit / 0° Celsius.

### NOTICE

**NOTICE** - Use Butane only when the temperature is above freezing. (32° Fahrenheit / 0° Celsius).

Propane gas will operate at temperatures as low as minus 44° Fahrenheit (-44°F) / minus 42° Celsius (-42°C).

Keep the regulator for the LP gas system (located near the LP gas tank) covered with a guard to protect it from road debris.

LP gas is prohibited on some roadways, bridges and tunnels. Check a map and with Departments of Transportation (or with the AAA) for travel routes that do not have such restrictions.

If you store your trailer, make sure that all appliances and generators are disabled prior to storing.

#### 8.4.1 LP GAS SYSTEM TROUBLESHOOTING

- Having liquid "gas" at your appliance is an indication that the LP gas tank is overfilled, or that the temperature is too cold.
- If your LP gas appliances do not stay lit, it may be because your LP gas system is contaminated with air or moisture. Many LP gas vendors have facilities to purge the air from an LP gas system.
- If your LP gas system is not providing gas, even when the shutoff valve is open, it might be because the LP gas regulator has frozen water in it.

### WARNING

**WARNING** - Risk of fire or explosion.

Never use a flame, heat lamp or hair dryer to thaw an LP gas regulator. Use an incandescent light bulb.

Do not remove the regulator cover or attempt to service the LP gas regulator.

#### 8.5 VENDING AND ACCESSORY DOORS

A vending or accessory door opens vertically and has a hinge along its top edge. These heavy doors are equipped with spring-assisted lifting, usually with a device known as a "gas spring." The gas spring lifting device is not designed to hold a vending door up. You must use the provided solid "prop rods" to hold a vending door in the open position.

### WARNING

**WARNING** - Gas springs lose their lifting capability with age and cold weather; and can cause the door to fall, resulting in injury.

Always hold the door open until the prop rods are in place.

Always use prop rods to hold vending or accessory doors open.

Be prepared to hold the weight of the door when removing the prop rod.

#### 8.6 ELECTRIC-POWERED LANDING GEAR

The landing gear (also known as the jack) on your trailer may be powered with an electric motor. The landing gear is operated up or down using controls located near the landing gear.

If the motor does not operate, such as when the battery is fully discharged, the landing gear can be operated manually with a socket wrench.

## 9. INSPECTION, SERVICE AND MAINTENANCE

### 9.1 INSPECTION, SERVICE AND MAINTENANCE SUMMARY CHARTS

You must inspect, maintain and service your trailer regularly to insure safe and reliable operation. If you cannot or are unsure how to perform the items listed here, have your dealer do them.

*Note: In addition to this manual, also check the relevant component manufacturer's manual.*

INSPECTION AND SERVICE BEFORE EACH USE		
ITEM	INSPECTION / SERVICE	MANUAL SECTION REFERENCE
Breakaway Brakes Electric Hydraulic	Check Operation Check Fluid Level	Sections 4.2.2.5, 4.2.3.5, and 4.2.4.3 Section 9.2.5.4
Breakaway Battery	Fully Charged, Connections Clean	Sections 4.2.2.5, 4.2.3.5, and 4.2.4.3 Section 9.2.5.3
Brakes, All Types	Check Operation	Section 7.3
Shoes and Drums	Adjust	Section 7.2 and Section 9.2.5.2
Coupler and Hitch Ball	Check for cracks, pits and flats. Replace with Ball and Coupler having trailer GVW Rating. Grease Check Locking Device and Replace when worn.	Section 9.2.6.1
Gooseneck Ball	Check for cracks, pits and flats. Replace with Ball and Coupler having trailer GVW Rating. Grease Check Locking Device and Replace when worn.	Section 4.2.3.2  Section 4.2.3.2 Section 9.2.6.2
Fifth Wheel and Kingpin	Check for cracks, pits and flats. Grease Check Locking Device and Replace when worn.	Section 4.2.4.1 Section 4.2.4.1 Sections 4.2.4.1 and 9.2.6.3
Safety Chains and Hooks	Check for Wear and Damage	Sections 4.2.2.4 and 4.2.3.4
Lights and Signals	Check Operation, Connection Clean	Section 4.2.2.6
Tires	Check COLD Tire Pressure. Inflate as needed.	Sections 1.1 and 9.2.10
Lug Bolts	Check Tightness	Sections 1.1 and 9.2.13.2
Rims	Inspect for Cracks and Dents	Section 9.2.11

INSPECTION AND SERVICE (INTERVALS)						
ITEM	INSPECTION / SERVICE	REFERENCE	SERVICE INTERVAL			
			SELECT INTERVAL	3 MONTHS 3,000 MILES (4,828 KM)	6 MONTHS 6,000 MILES (9,656 KM)	12 MONTHS 12,000 MILES (19,312 KM)
Axle	Alignment Check	9.2.11				X
Axle Attachment Bolts	Checked by Elite Authorized Dealer	9.2.1				X
Shoes and Drums	Check for Scoring and Wear  Replace as Needed	9.2.1  Manufacturer				X
Brakes, Electric Magnets Controller - Tow Vehicle	Check Wear and Current Draw Check Power Output (Amps) and Mod.	9.2.5.3 C 9.2.5.3 C			X	
Brakes, Hydraulic Brake Lines Master Cylinder		9.2.5.4 9.2.5.4				
Jacks, Drop-Leg	Grease Gears at Top	Manufacturer				X
Structure Rubber Mats and Floor Hinges, Doors/Dividers Frame Members Welds Roof Vents Windows	Remove Mats. Wash both Sides & Floor Inspect. Replace Worn or Broken Parts Inspect all Frames. Replace as Needed Inspect all Welds. Repair as Needed Clean Dirt Buildup. Lubricate Hinges Clean Dirt Buildup. Lubricate Hinges	9.2.3 5.2.2.1/5.2.3.1 9.2.1 9.2.3.2 9.2.3 9.2.3		X X  X X		X X
Tires	Inspect Tread and Sidewalls Thoroughly Replace Tire with Worn Threads, Sidewalls or Bulging Sidewalls	9.2.10 9.2.10	ROTATE EVERY 6 MONTHS		X X	
Wheels Bearings (Sealed) Bearings (Unsealed)	Inspect. Confirm Free Running. Disassemble. Inspect, Repack, Reassemble. Replace is submerged in water.	9.2.13 9.2.13.1	AFTER ANY IMPACT			X X
Rims, Wheels	Inspect for Cracks or Dents.	9.2.11				X

## 9.2 INSPECTION AND SERVICE INSTRUCTIONS

### 9.2.1 CARE AND CLEANING

You can maintain the beauty of your Elite Trailer in much the same way as your automotive vehicle. A car wash of hot water and soap will remove the dirt and road film. Occasionally, you may see the aluminum become oxidized which will cause a dull aluminum look as your automotive vehicle will when it needs to be waxed. In the case of the aluminum you may locate a truck wash shop that has the capability of acidizing. The acid wash will return the aluminum to a clean new trailer look. This can be done on a once a year basis if needed.

Use aluminum bright polish or rubbing compound on aluminum surfaces such as fenders, top rail, nose, step plates, rear parts, etc. is recommended for those who do not mind extra effort to accomplish a bright chrome like aluminum shine.

 **NOTICE**

**NOTICE** - Road salt is extremely corrosive.

Do not let road salt remain on your trailer as it can cause pitting and otherwise damage the aluminum surface.

Thoroughly wash your trailer immediately after use anytime it comes into contact with road salt.

### 9.2.2 AXLE BOLTS, FRAME, SUSPENSION AND STRUCTURE

 **WARNING**

**WARNING** - Worn or broken suspension parts can cause loss of control and injury may result.

Have trailer professionally inspected annually and after any impact.

To perform many of the inspections and maintenance activities, you must jack up the trailer. "Jacking Points for All Trailers" (See Fig. 19) indicates the general areas where jacks and jack stands may be applied.

When jacking and using jack stands, place them so as to clear wiring, brake lines, and suspension parts (springs, torsion bars, etc.). Place jacks and jack stands inside of the perimeter strip on the supporting structure to which the axles are attached.

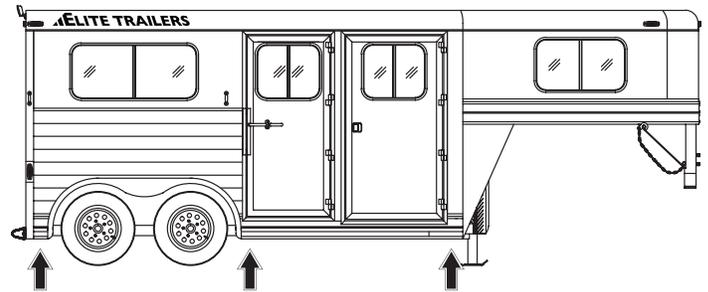


Fig.19 Jacking Points for All Trailers

 **WARNING**

**WARNING** - Never crawl under your trailer unless it is on firm and level ground and resting on properly placed and secured jack stands. Chock block all wheels when applicable, so the trailer may not roll or move.

### 9.2.3 TRAILER STRUCTURE

Even though Elite Trailer Manufacturing, LLC. uses a marine grade aluminum sheet, because the trailer floor receives the most abuse, it will most likely corrode before any other part of the structure. This is particularly true for horse and livestock trailers, having floors subjected to urine and manure. The urine and manure are corrosive to the metal flooring and other structural parts of the trailer.

Remove the rubber mats from the floor of the trailer, and wash them, at least every three months. Using a power washer and a detergent solution, wash both sides of the rubber mat, as well as the floor and walls of the trailer. Rinse the rubber mat and the trailer floor and walls. Be sure the rubber mat and trailer floor are completely dry before replacing the rubber mat.

#### 9.2.3.1 - Fasteners and Frame Members

Inspect all of the fasteners and structural frame members for bending and other damage, cracks, or failure. Repair or replace any damaged fastener and repair the frame member. If you have any questions about the condition or method of repair of fasteners or frame members, get the recommendation of, or have the repair done by, your dealer.

The various fastener types used on your trailer are:

- Bolts, which are used mainly for attaching door and gate hinges to the trailer body.
- Buck Rivets, which are used to attach the sides and roof panels of the body to each other, and to the frame of the trailer.
- Huck Bolts may be at various locations on the sub-frame. See Fig. 20 Huck Bolts are not user serviceable. If you detect a loose Huck Bolt fastener, do not tow the trailer. Call your dealer for instructions.

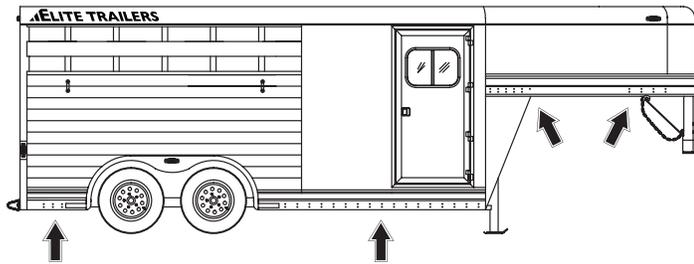


Fig.20 Typical Huck Bolt Locations

**WARNING**

**WARNING** - Broken or damaged fasteners or welds can cause injury or damage to trailer and contents.  
Inspect for, and repair all damaged parts at least once a year.

9.2.3.2 - Welds

All welds can crack or fail when subjected to heavy loads or movement of cargo that was not properly tied to prevent movement. Any time that you know or suspect that the trailer has been subjected to heavy loads or movement of cargo, immediately inspect the welds and fasteners for damage. To prevent severe damage to your trailer, inspect all of the welds for cracks or failure at least once a year.

**WARNING**

**WARNING** - Improper weld repair will lead to early failure of the trailer structure and can cause serious injury or death.  
Do not repair cracked or broken welds unless you have the skills and equipment to make a proper repair. If not, have the welds repaired by your dealer.

9.2.4 DROP RAMP TORSION SPRINGS

If your trailer has a drop ramp door, the weight of the door may be partially held by a torsion spring and a cable. Stand to the side when opening the drop ramp. You could be hurt if you are behind the drop ramp and the counterbalance does not work.

Inspect the cable and cable ends regularly for fraying and signs of loosening. If released, a torsion spring can inflict serious injury.

The torsion spring and cable are not user serviceable. The torsion spring must be serviced by a person who is trained in torsion spring safety.

9.2.5 TRAILER BRAKES

For Brake Troubleshooting Guide see Axle and Brake Manual.

9.2.5.1 - Brake Shoes and Drums

Properly functioning brake shoes and drums are essential to ensure safety. You must have your dealer inspect these components at least once per year, or each 12,000 miles (19,312 kilometers).

The brake shoes must be adjusted after the first 200 miles (322 kilometers) of use, and each 3,000 miles (4,828 kilometers) thereafter. Most axles are fitted with a brake mechanism that will automatically adjust the brake shoes when the trailer is "hard braked" from a rearward direction. Read your axle and brake manual to see how to adjust your brakes. If you do not have this manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for a free copy.

9.2.5.2 - Manually Adjusting Brake Shoes

Some braking systems are not automatically adjusted by hard stopping. These brakes require manual adjustment. The following steps apply to adjust most manually adjustable brakes. Read your axle and brake manual to see how to adjust your brakes. If you do not have this manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for a free copy.

- Jack up the trailer and secure it on adequate capacity jack stands.
- Be sure the wheel and brake drum rotate freely.
- Remove the adjusting-hole cover from the adjusting slot on the bottom of the brake backing plate.
- With a screwdriver or standard adjusting tool, rotate the starwheel of the adjuster assembly to expand the brake shoes. Adjust the brake shoes out until the pressure of the linings against the drum makes the wheel very difficult to

turn. *Note: Your trailer maybe equipped with drop spindle axles. See axle manual for your axle type. You will need a modified adjusting tool for adjusting the brakes in these axles. With drop spindle axles, a modified adjusting tool with about an 80 degree angle should be used.*

- Rotate the starwheel in the opposite direction until the wheel turns freely with a slight drag.
- Replace the adjusting-hole cover.
- Repeat the above procedure on all brakes.
- Lower the trailer to the ground.

#### 9.2.5.3 - Brakes, Electric

Two different types of electric brakes may be present on the trailer; an emergency electric breakaway system, which acts only if the trailer comes loose from the hitch and the breakaway pin is pulled. The other brake is an electric braking system that acts whenever the brakes of the tow vehicle are applied.

##### 9.2.5.3 A - Breakaway Brake

###### 9.2.5.3 A (i) - Breakaway Battery

This battery supplies the power to operate the trailer brakes if the trailer uncouples from the tow vehicle. Be sure to check, maintain and replace the battery according to the battery manufacturer's instructions.

## CAUTION

**CAUTION** - Extreme cold weather can degrade battery performance and cause brakes to not operate properly. Always check battery charge level before towing.

###### 9.2.5.3 A (ii) - Breakaway Switch

This switch causes the breakaway battery to operate the electric brakes if the trailer uncouples from the tow vehicle.

The lanyard for the pull pin is connected to the tow vehicle, and the switch is connected to the trailer. To check for proper functioning of the switch, battery and brakes, you must pull the pin from the switch and confirm that the brakes apply to each wheel. You can do this by trying to pull the trailer with the tow vehicle, after pulling the pin. The trailer brakes may not lock, but you will notice that a greater force is needed to pull the trailer.

## WARNING

**WARNING** - If electric brakes do not operate when trailer is uncoupled from the tow vehicle, serious injury or death can occur.

Check emergency breakaway brake system BEFORE each tow.

##### 9.2.5.3 B - Tow Vehicle Operated Electric Brakes

The electric brakes that operate in conjunction with the tow vehicle brakes must be “synchronized” so that braking is properly distributed to the tow vehicle brakes and the trailer brakes. For proper operation and synchronization, read and follow the axle/brake and the brake controller manufacturers’ instructions. If you do not have these instructions, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for a free copy.

##### 9.2.5.3 C - Magnets for all Electric Brakes

To make certain an electrically-operated braking system will function properly, you must have your dealer inspect the magnets at least once a year, or each 12,000 miles (19,312 kilometers). See the brake manual for wear and current inspection instructions.

##### 9.2.5.4 - Brakes, Hydraulic

If your trailer has hydraulically-operated brakes, they function the same way the hydraulic brakes do on your tow vehicle. The hydraulic braking system must be inspected by a dealer, at least as often as the brakes on the tow vehicle, but no less than once per year. This inspection includes an assessment of the condition and proper operation of the wheel cylinders, brake shoes, brake drums and hubs.

You must check the fluid level in the master cylinder reservoir at least every three months. If you tow your trailer an average of 1,000 miles (1,609 kilometers) per month in a hot and dry environment, you must check the brake fluid level once a month. The brake fluid reservoir is located on the tongue of the trailer or near the gooseneck. Fill with DOT 4 brake fluid.

##### 9.2.5.4 A - Electrical-Operated Hydraulic Brakes

Electric/hydraulic braking systems, which are mounted on the trailer, use a small electrically-driven pump to generate hydraulic pressure, which operates the brake cylinders. Like electrical brakes, an electric/hydraulic braking system is operated by an electrical signal from the tow vehicle.

## 9.2.6 TRAILER CONNECTION TO TOW VEHICLE

### 9.2.6.1 - Coupler and Ball

The coupler on the trailer connects to the ball attached to the hitch on the tow vehicle. The coupler, ball and hitch transfer the towing forces between the tow vehicle and the trailer. Before each tow, coat the ball with a thin layer of automotive bearing grease to reduce wear and ensure proper operation; and check the locking device that secures the coupler to the ball for proper operation.

See the coupler manufacturer's manual for other inspection and maintenance activities. If you do not have this manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for a free copy.

If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the ball or coupler, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the ball and coupler system. All bent or broken coupler parts must be replaced before towing the trailer.

The coupler handle lever must be able to rotate freely and automatically snap into the latched position. Oil the pivot points, sliding surfaces, and spring ends with SAE 30W motor oil. Keep the ball pocket and latch mechanism clean. Dirt or contamination can prevent proper operation of the latching mechanism.

When replacing a ball, the load rating must match or exceed the GVWR of the trailer.

### 9.2.6.2 - Gooseneck

The gooseneck receiver on the trailer connects to a hitch-mounted ball on the towing vehicle. The receiver, ball and hitch transfer the towing forces between the tow vehicle and the trailer. Before each tow, coat the ball with a thin layer of automotive bearing grease to reduce wear and ensure proper operation; and check the locking device that secures the receiver to the ball for proper operation.

See the gooseneck ball receiver manufacturer's manual for other inspection and maintenance activities. If you do not have a manual for the receiver, call Elite Trailer Manufacturing, LLC. at (405) 745-5757 for a free copy.

If you see or can feel evidence of wear, such as flat spots, pitting or corrosion, on the ball or receiver, immediately have your

dealer inspect them to determine the proper action to prevent possible failure of the ball and receiver system.

When replacing a ball, the load rating must match or exceed the GVWR of the trailer.

### 9.2.6.3 - Kingpin and Fifth Wheel

Before each tow, inspect the fifth wheel and kingpin for wear, and coat the contact surface of the fifth wheel plate with water-resistant Lithium-base grease. If you see evidence of wear on the fifth wheel or kingpin, immediately have your dealer inspect them to determine the proper action to prevent failure of the fifth wheel and kingpin system.

See the manual prepared by the manufacturer of the fifth wheel and kingpin for other inspection and maintenance activities. If you do not have this manual, call Elite Trailer Manufacturing LLC. at (405) 745-5757 for a free copy.

## 9.2.7 LANDING LEG OR JACK

If a grease fitting is present, you must use a grease gun to lubricate the jack mechanism. Grease the gears in the top of hand-cranked jacks once a year, by removing the top of the jack and pumping or hand packing grease into the gears.

## 9.2.8 LIGHTS AND SIGNALS

Before each tow, check the trailer taillights, stoplights, turn signals and any clearance lights for proper operation.

### WARNING

**WARNING** - Improper operating taillights, stoplights and turn signals can cause collisions.

Check all lights before each tow.

## 9.2.9 ACCESSORY BATTERY

Your trailer may be outfitted with an accessory battery that operates lighting, electric landing gear, slide-outs or other accessories. An accessory battery may be kept charged either by the tow vehicle or by the generator or shore power. See the manual for the accessory battery.

A disconnect switch may be provided to disconnect the accessory battery when you do not plan to be using the trailer for an extended period, such as seasonal storage. If there is no disconnect switch, then remove the cables from the battery terminals.

The accessory battery must be kept in a charged condition during storage. The battery could freeze and break if it becomes discharged.

**9.2.10 TIRES**

Trailer tires may be worn out even though they still have plenty of tread left. This is because trailer tires have to carry a lot of weight all the time, even when not in use. It is actually better for the tire to be rolling down the road than to be idle. During use, the tire releases lubricants that are beneficial to tire life. Using the trailer tires often also helps prevent flat spots from developing.

The main cause of tire failure is improper inflation. Check the cold tire inflation pressures at least once a week for proper inflation levels. "Cold" means that the tires are at the same temperature as the surrounding air, such as when the vehicle has been parked overnight. Wheel and tire manufacturers recommend adjusting the air pressure to the trailer manufacturer's recommended cold inflation pressure, in pounds per square inch (PSI) stated on the vehicle's Federal Certification Label or Tire Placard when the trailer is loaded to its gross vehicle weight rating (GVWR). If the tires are inflated to less than the recommended inflation level or the GVWR of the trailer is exceeded, the load carrying capacity of the tire could be dramatically affected. If the tires are inflated more than the recommended inflation level, handling characteristics of the tow vehicle/trailer combination could be affected. Refer to the owner's manual or talk to your dealer or vehicle manufacturer if you have any questions regarding proper inflation practices.

Tires can lose air over a period of time. In fact, tires can lose 1 to 3 PSI per month. This is because molecules of air, under pressure, weave their way from the inside of the tire, through the rubber, to the outside. A drop in tire pressure could cause the tire to become overloaded, leading to excessive heat build up. If a trailer tire is under-inflated, even for a short period of time, the tire could suffer internal damage.

High speed towing in hot conditions degrades trailer tires significantly. As heat builds up during driving, the tire's internal structure starts to breakdown, compromising the strength of the tire. It is recommended to drive at moderate speeds.

Statistics indicate the average life of a trailer tire is about five years under normal use and maintenance conditions. After three years, replacing the trailer tires with new ones should be considered, even if the tires have adequate tread depth. Some experts claim that after five years, trailer tires are considered

worn out and should be replaced, even if they have had minimal or no use. This is such a general statement that it may not apply in all cases. It is best to have your tires inspected by a tire supplier to determine if your tires need to be replaced.






**! NOTICE**

**NOTICE** - If you are storing your trailer for an extended period, make sure the tires are fully inflated to the maximum rated pressure and that you store them in a cool, dry place, such as a garage. Use tire covers to protect the trailer tires from the harsh effects of the sun.

**! WARNING**

**WARNING** - Word, damaged or under-inflated tires can cause loss of control, resulting in damage, serious injury and possibly death.

Inspect tires before each tow.

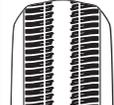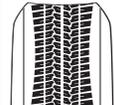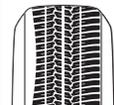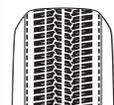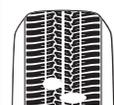Trailer Tire Wear Diagnostic Chart			
	<b>Center Wear</b>	Over Inflation	Adjust pressure to particular load per tire catalog
	<b>Edge Wear</b>	Under Inflation	Adjust pressure to particular load per tire catalog
	<b>Side Wear</b>	Loss of Camber or Overloading	Make sure load doesn't exceed axle rating. Get alignment
	<b>Toe Wear</b>	Incorrect Toe In	Get alignment
	<b>Cupping</b>	Out of Balance	Check bearing adjustment and balance tires
	<b>Flat Spots</b>	Wheel Lockup and Tire Skidding	Avoid sudden stops when possible and adjust brakes

### 9.2.11 AXLES

Just like your tow vehicle your trailer wheel and axle alignment should be checked anytime the trailer has been struck, or impacted, on or near the wheels, or if the trailer has struck a curb. Alignment should be checked every year even if no obvious impact has occurred. Proper wheel and axle alignment can only be performed by a qualified service technician for assistance in locating a qualified technician, contact your dealer or Elite Trailer Manufacturing, LLC. at (405) 745-5757.

### 9.2.12 WHEEL RIMS

If the trailer has been struck, or impacted, on or near the wheels, or if the trailer has struck a curb, inspect the rims for damage (i.e. being out of round); and replace any damaged wheel. Inspect the wheels for damage every year, even if no obvious impact has occurred.

### 9.2.13 WHEELS, BEARINGS AND LUG NUTS

A loose, worn or damaged wheel bearing is the most common cause of brakes that grab.

To check your bearings, jack trailer and check wheels for side-to-side looseness. If the wheels are loose, or spin with a wobble, the bearings must be serviced or replaced.

Most trailer axles are built with sealed bearings that are not serviceable. Sealed bearings must be replaced as complete units.

#### 9.2.13.1 - Unsealed Bearings (Hub)

If your trailer has unsealed axle bearings, they must be inspected and lubricated once a year or 12,000 miles (19,312 kilometers) to insure safe operation of your trailer.

If a trailer wheel bearing is immersed in water, it must be replaced.

If your trailer has not been used for an extended amount of time, have the bearings inspected and packed more frequently, at least every six months and prior to use.

Refer to the manual provided by the axle manufacturer for wheel bearing service information. If you do not have this manual, call Elite Trailer Manufacturing, LLC. at (405) 745-5757.

#### 9.2.13.2 - Lug Nuts (Bolts)

Being sure wheel mounting nuts (lug nuts) on trailer wheels are tight and properly torqued is an important responsibility that trailer owners and users need to be familiar with and practice. Inadequate and/or inappropriate wheel nut torque (tightness) is a major reason that lug nuts loosen in service. Loose lug nuts can rapidly lead to a wheel separation with potentially serious safety consequences.

Lug nuts are prone to loosen right after a wheel is mounted to a hub. When driving on a new or remounted wheel, check the lug nut tightness often during the first few hundred miles of the trailer's use, especially after the first 10, 25 and 50 miles (16, 40 and 80 kilometers) of driving, before each tow, and at least twice per year thereafter.

#### WARNING

**WARNING** - Lug nuts are prone to loosen after initial installation, which can lead to serious injury or death.

Check lug nuts for tightness on a new trailer or when wheel(s) have been remounted after the first 10, 25 and 50 miles (16, 40 and 80 kilometers) of driving.

#### WARNING

**WARNING** - Metal creep between the wheel rim and lug nuts will cause rim to loosen and could result in a wheel coming off, leading to serious injury or death.

Tighten lug nuts before each tow.

Tighten the lug nuts to the proper torque for the axle size on your trailer to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. The only way to be certain you have checked the torque or torqued the lug nuts to the proper torque is with a torque wrench. If you do not have a torque wrench, visit a mechanical service garage or your trailer dealer to have your lug nuts torqued to the proper specs. Four-way wrenches, ratchets, and similar tools can be useful for short-term emergency repairs, but are not appropriate tools for adequately checking lug nut torque. You must use a torque wrench to adequately indicate the torque that you are applying to the lug nut. If you do not have a torque wrench, tighten the fasteners with a lug wrench as much as you can, then have a service garage or dealer tighten the lug nuts to the proper torque. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels.

Keep a record of the date and approximate mileage when you check the lug nut torque. Note any lug nut that has lost torque. Investigate the reason(s) if the lug nut torque is not maintained after more than one re-torque application, because this indicates there is something wrong with the lug nuts, nut studs, wheels and/or hubs and should be corrected.


Contact your dealer or Elite Trailer Manufacturing, LLC. at (405) 745-5757 immediately if you experience any persistent lug nut loosening or any other lug, wheel or axle problems.

In the event of a wheel separation incident, notify your dealer and Elite Trailer Manufacturing, LLC. at (405) 745-5757. Seek prompt professional assistance in assessing the trailer and its gear, and retain, but don't re-use involved lugs, wheels and studs. Do not attempt to repair or service the trailer yourself.


Lug Nut Torque - STEEL WHEELS		
Axle Rating (lbs.)	Stud Size	Dry Torque (lb.-ft.)
3,500 to 7,000	1/2 Inch	90 - 120
8,000	5/16 Inch	90 - 120
8,000 to 9,000	5/8 Inch	190 - 210
10,000	5/8 Inch Flanged	190 - 210
12,000	3/4 Inch Flanged	190 - 210

Lug Nut Torque - ALUMINUM WHEELS		
Rim Size	Stud Size	Dry Torque (lb.-ft.)
15 Inch	1/2 Inch	80 - 90
16 Inch	1/2 Inch	80 - 90
16 Inch	5/16 Inch	120 - 140
17.5 Inch	5/16 Inch	130 - 150
17.5 Inch	5/8 Inch	140 - 160


Lug Nut Sequence of Tightening

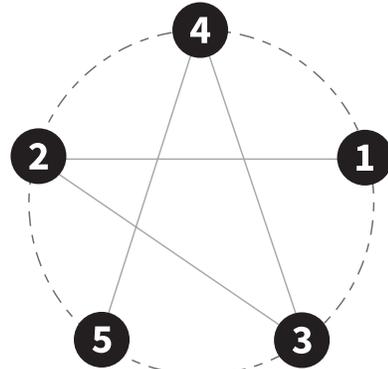

5 Lug Bolt Pattern

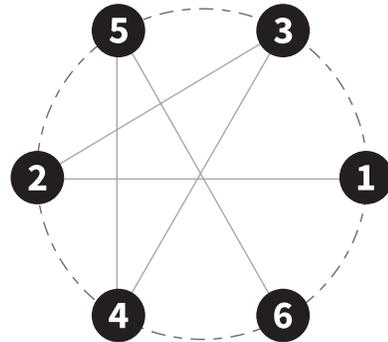

6 Lug Bolt Pattern

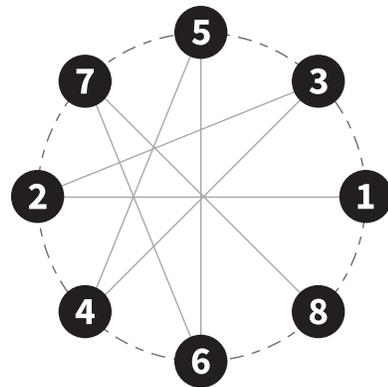

8 Lug Bolt Pattern





# **ELITE TRAILERS**

**ELITE TRAILER MANUFACTURING, LLC.**

7700 SW 29<sup>TH</sup> Street Oklahoma City, OK 73179

Phone: (405) 745-5757 Fax: (405) 745-4527

*[www.elitetrailers.com](http://www.elitetrailers.com)*